




SMOKE / VAPE SHELTER

3M INSTALLATION INSTRUCTIONS





STEP 1:
CHASSIS AND CORNER PROFILE

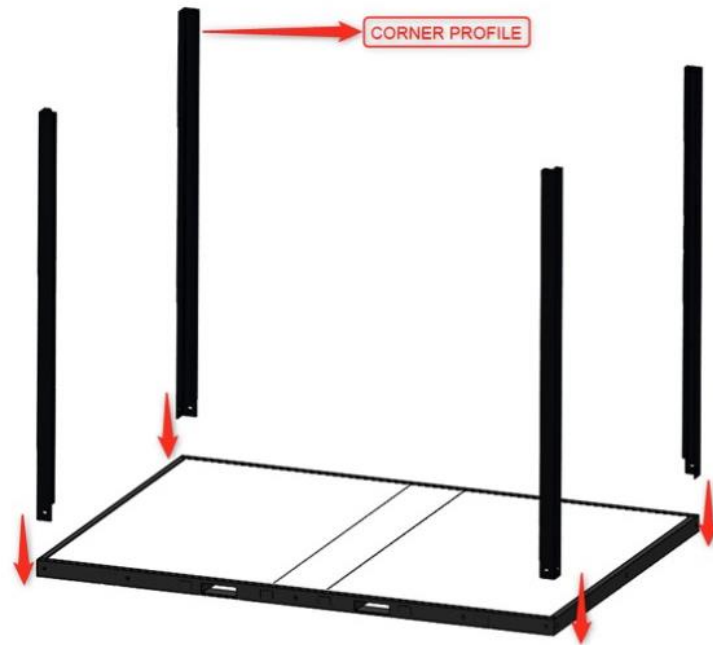

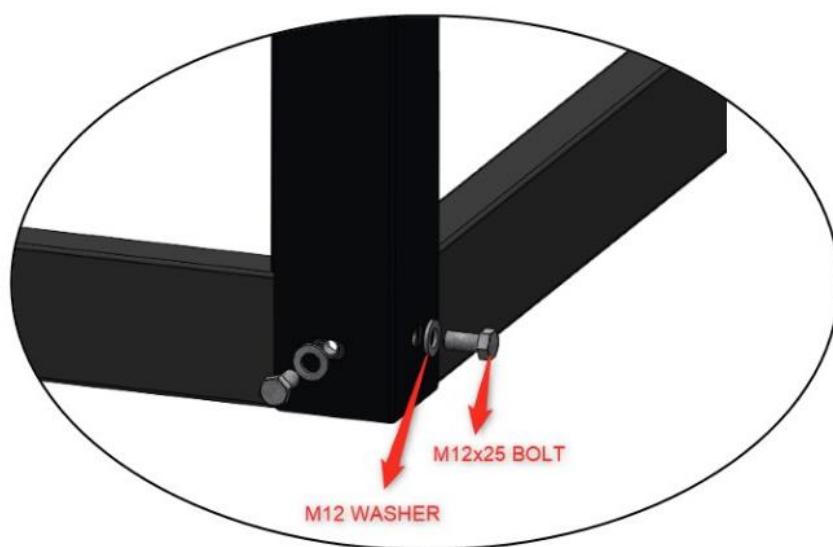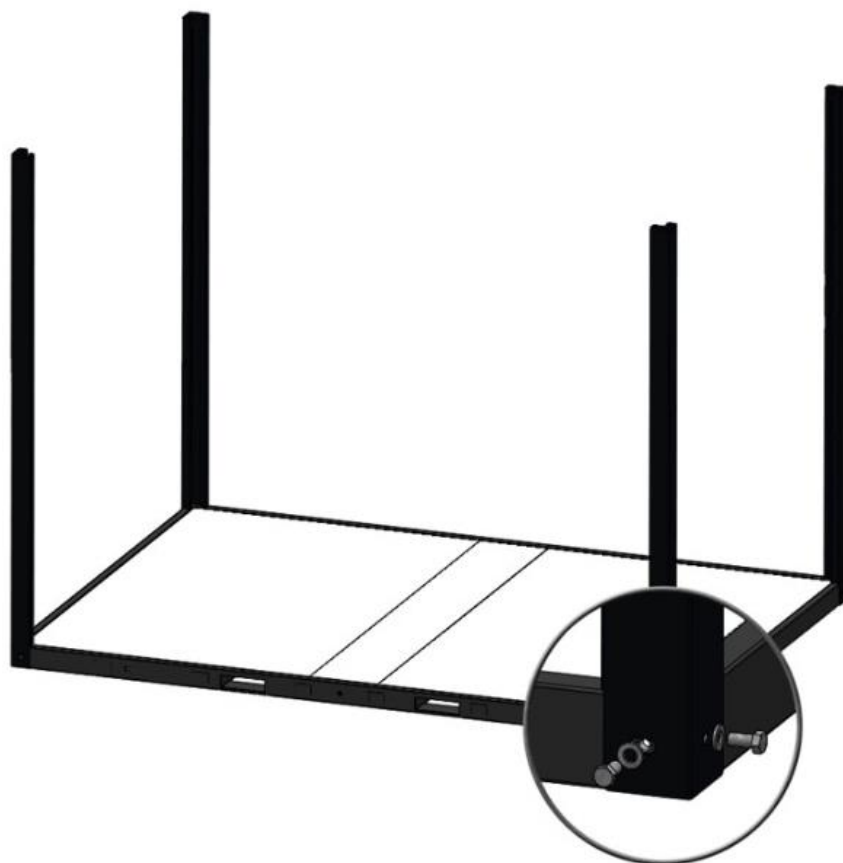



NOTE;

1 - 3 - 5	SAME PART
2 - 4	SAME PART

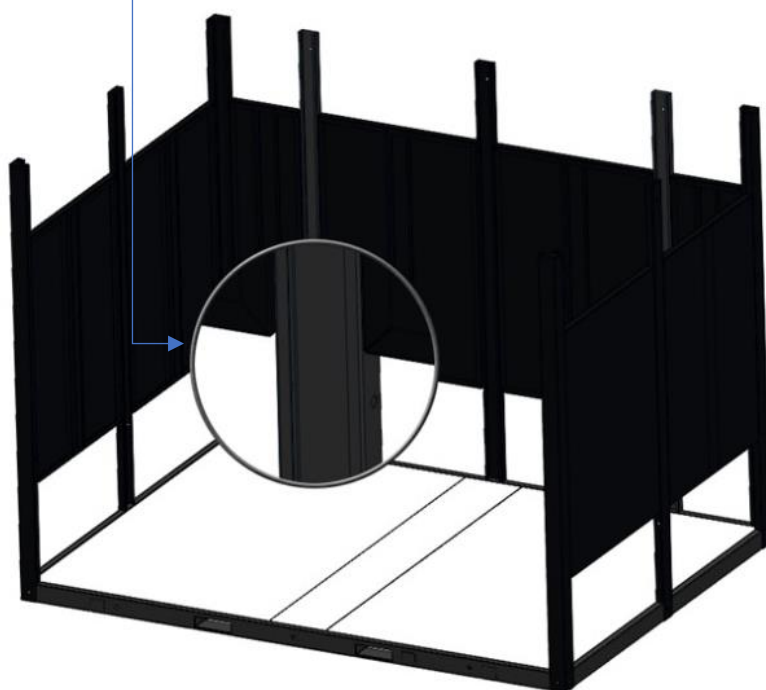
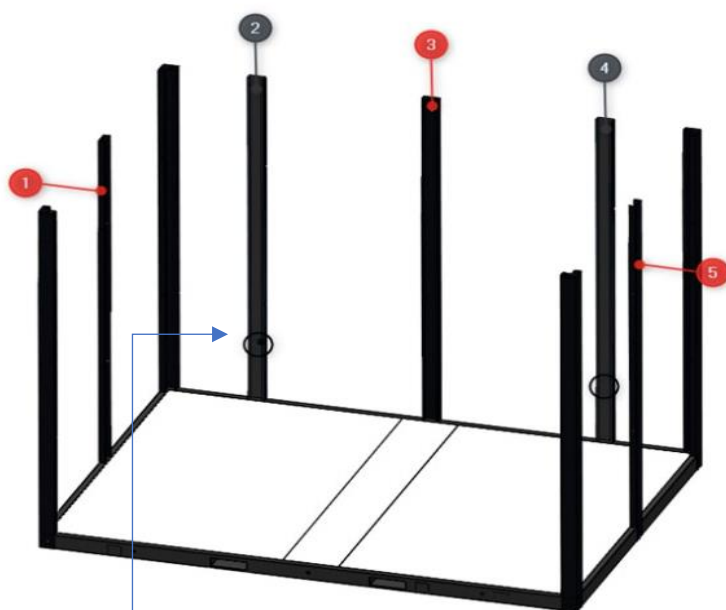


STEP 2:


MIDDLE PROFILE CONNECTION

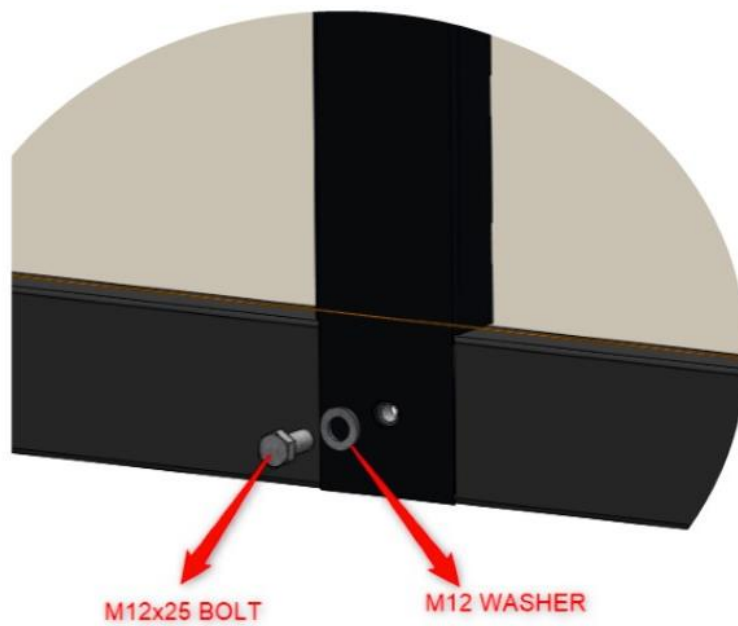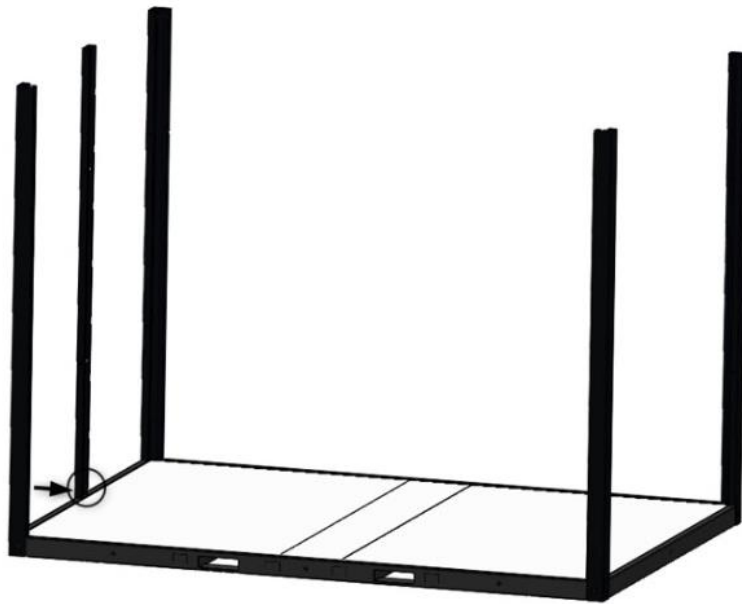


STEP 3:
PANEL CONNECTION

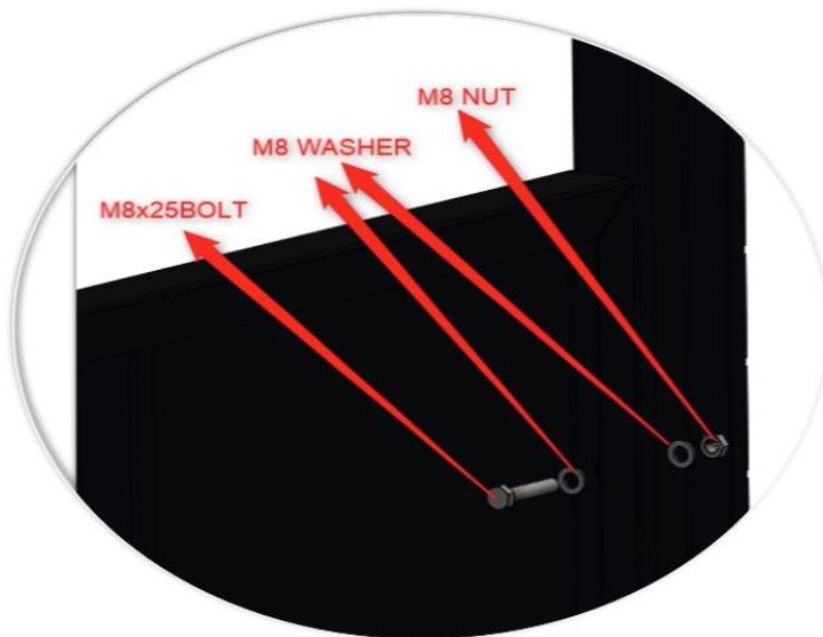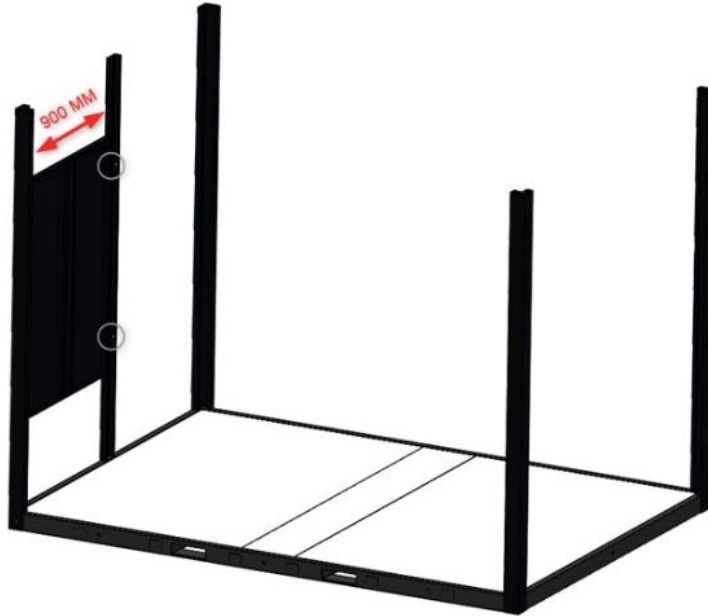



STEP 4:
PANEL CONNECTION

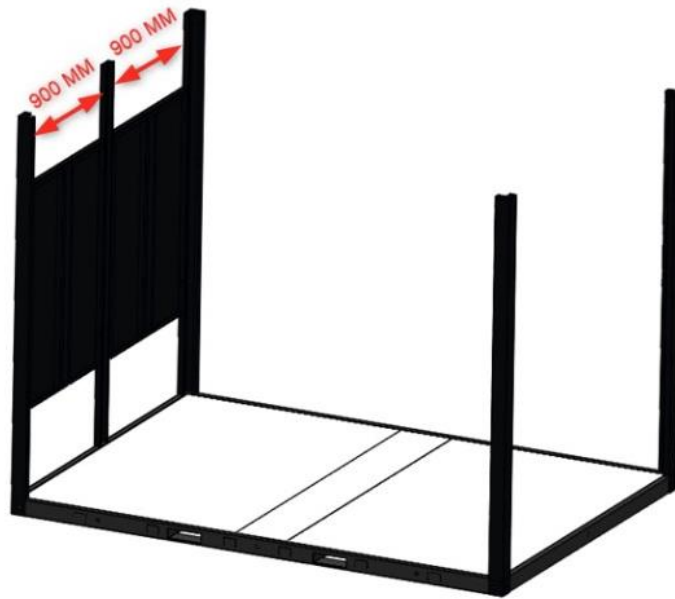

STEP 5:
MIDDLE PROFILE CONNECTION

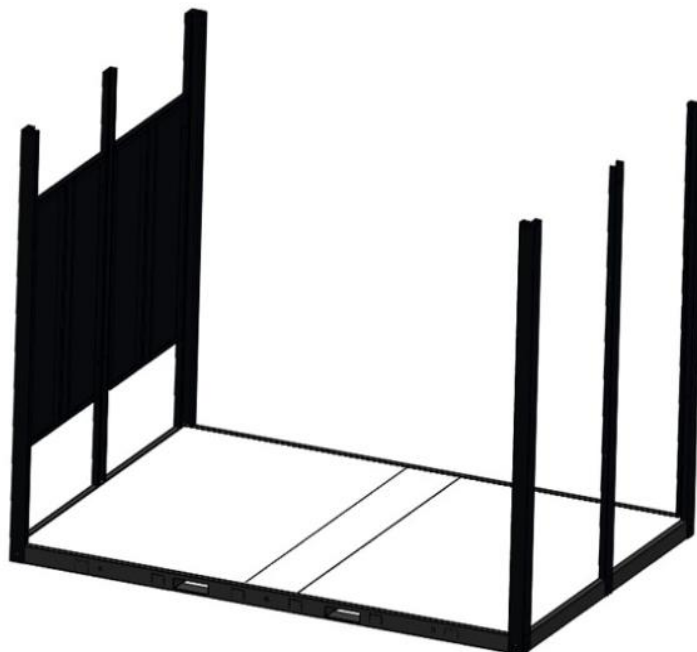


STEP 6:
PANEL CONNECTION

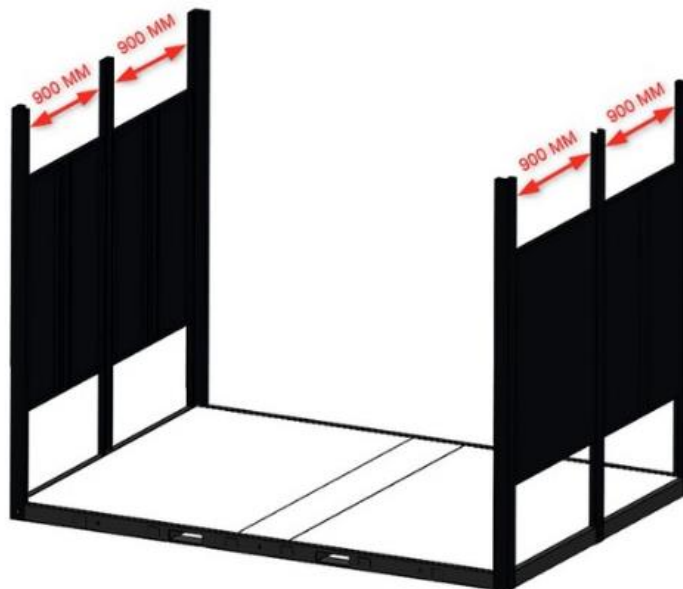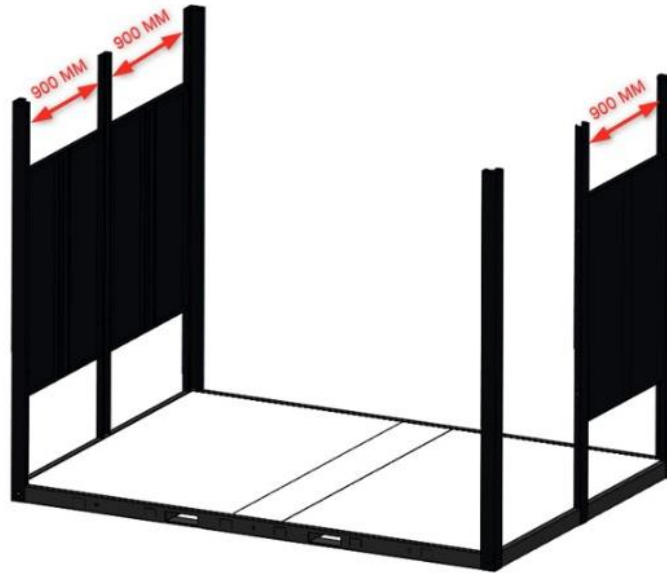


STEP 7:

MIDDLE PROFILE LOCATIONS

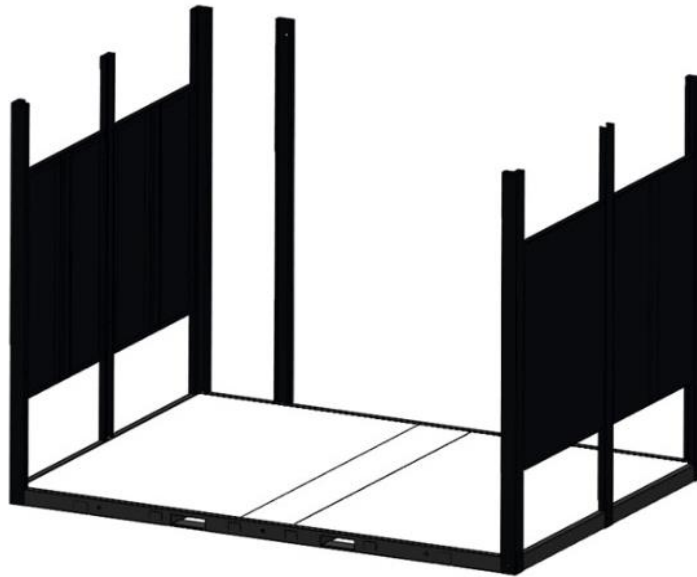


STEP 8:

PANEL CONNECTION

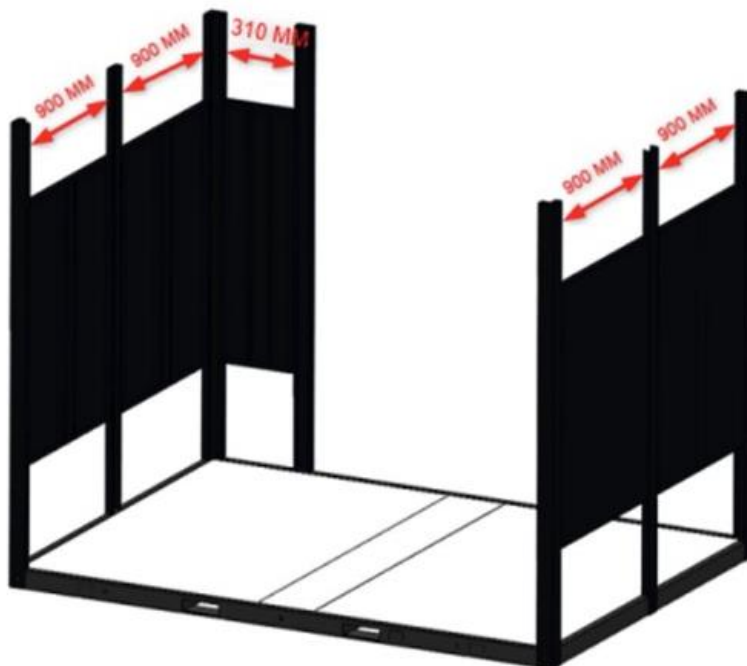


STEP 9:

MIDDLE PROFILE LOCATIONS

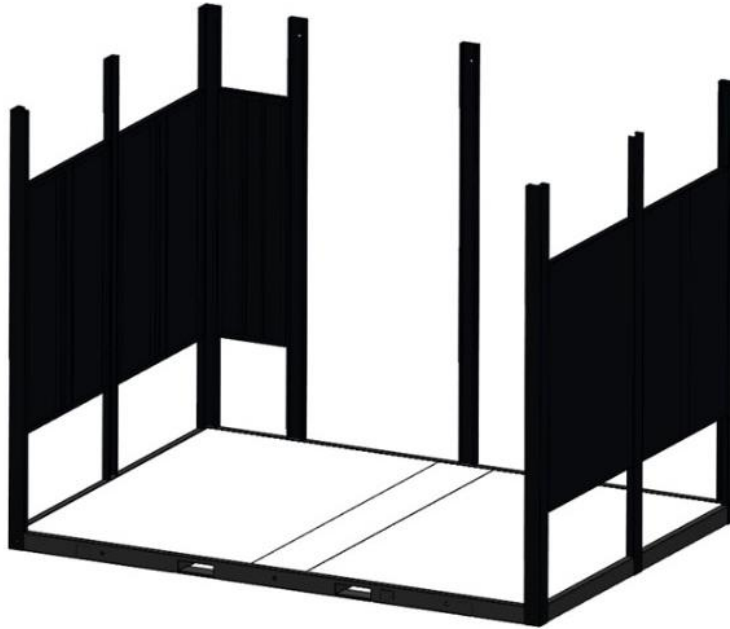


STEP 10:


PANEL CONNECTION

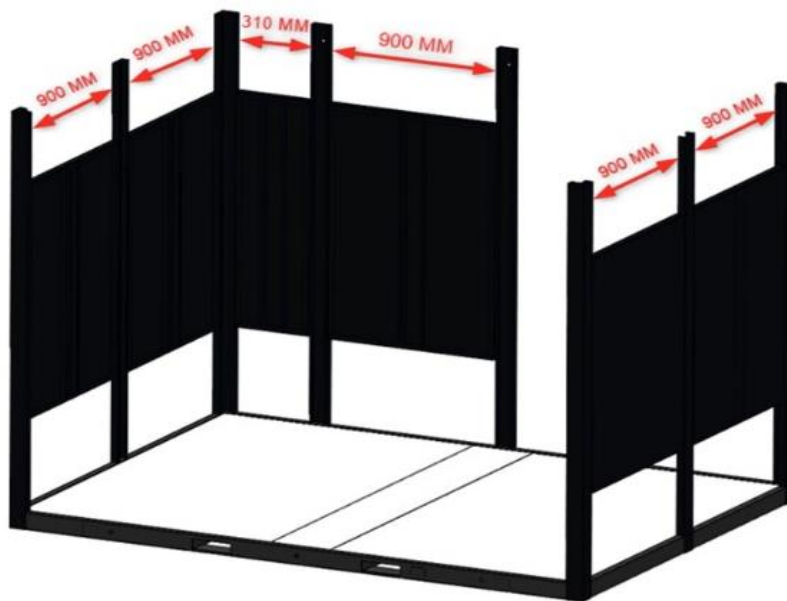

STEP 11:
MIDDLE PROFILE LOCATIONS


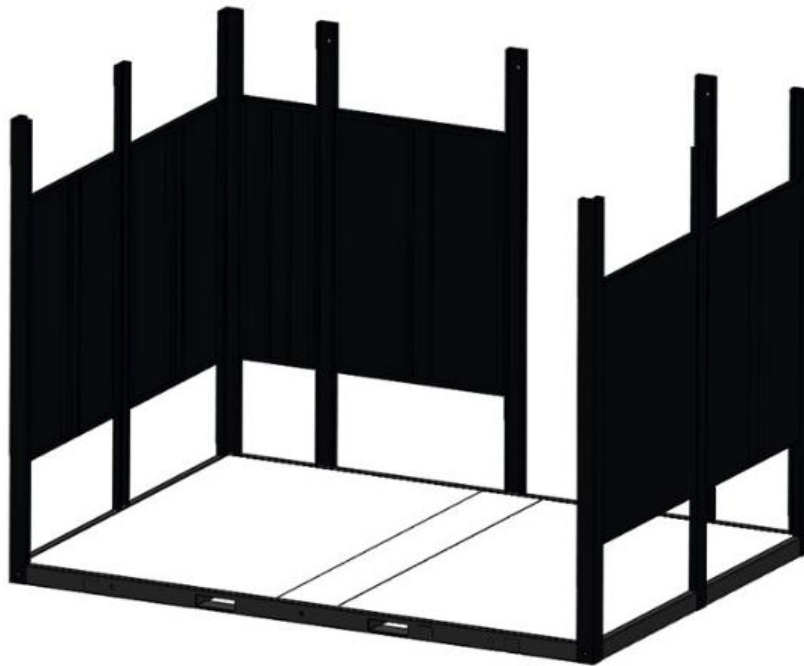


STEP 12:
PANEL CONNECTION




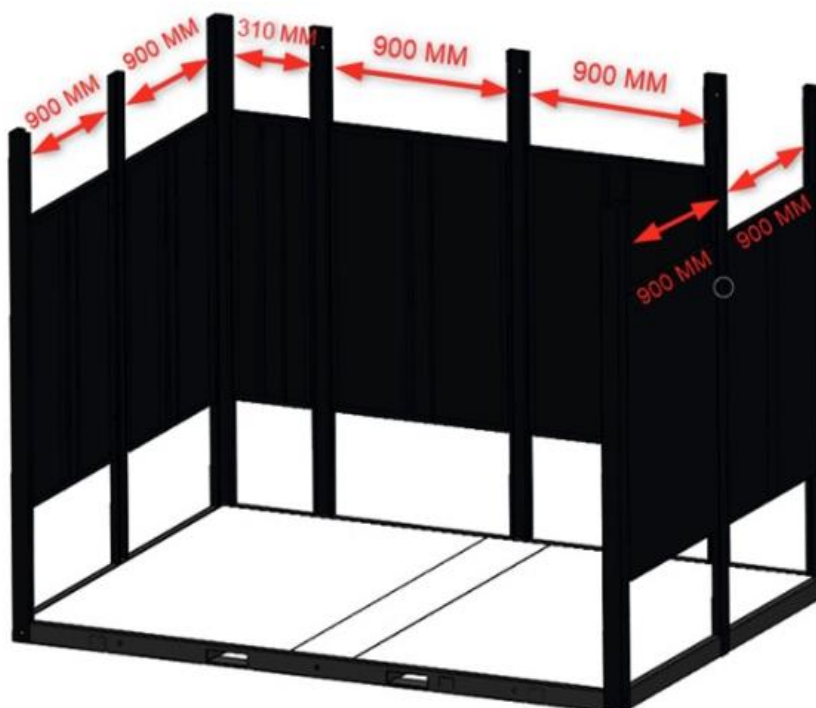


STEP 13:

PANEL CONNECTION


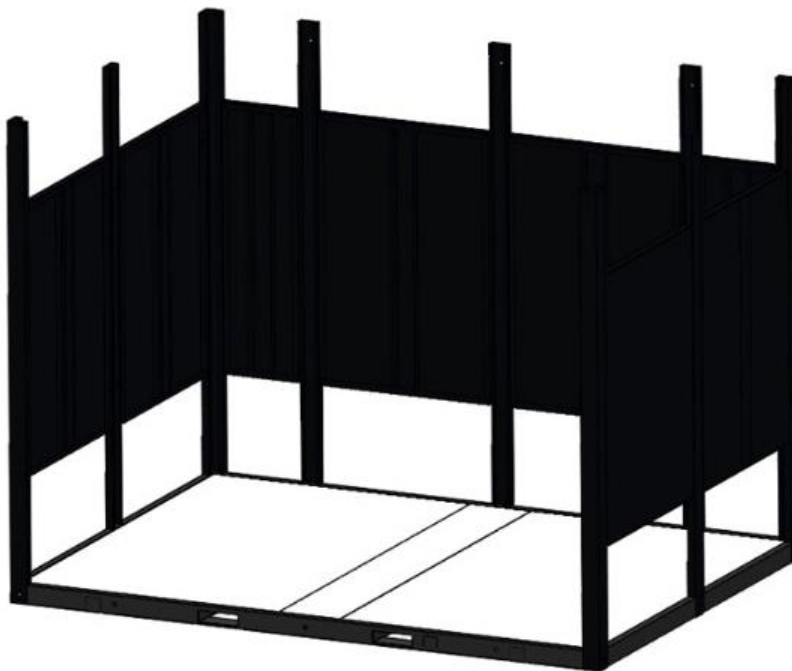
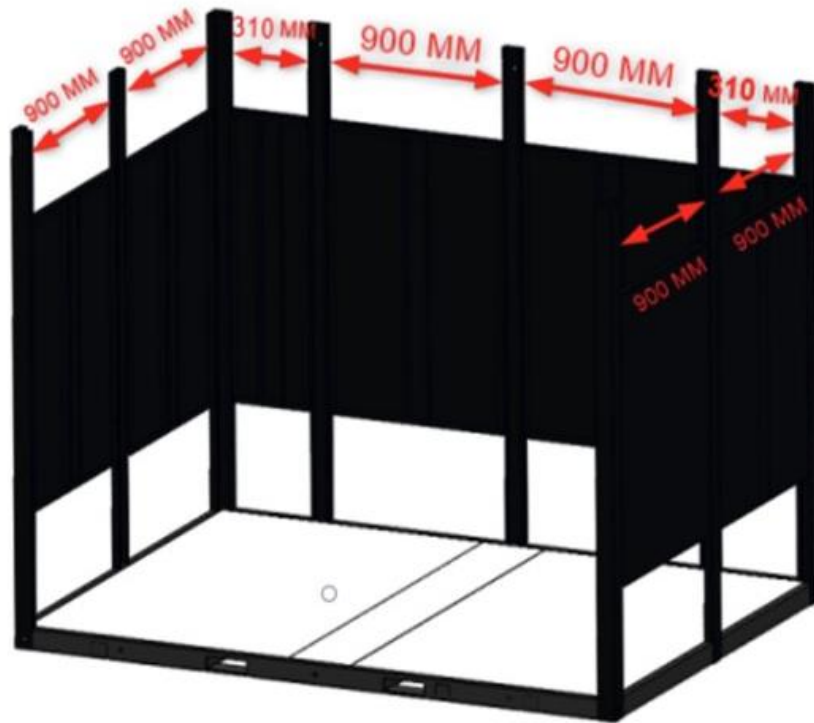


STEP 14:
ROOF INSTALLATION

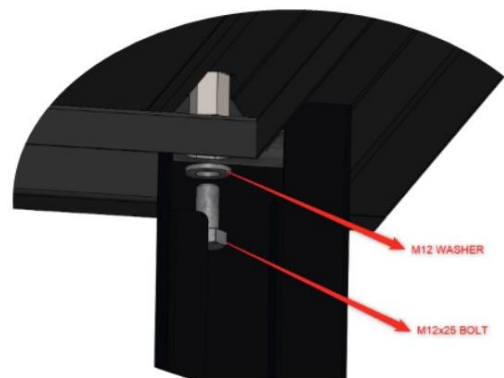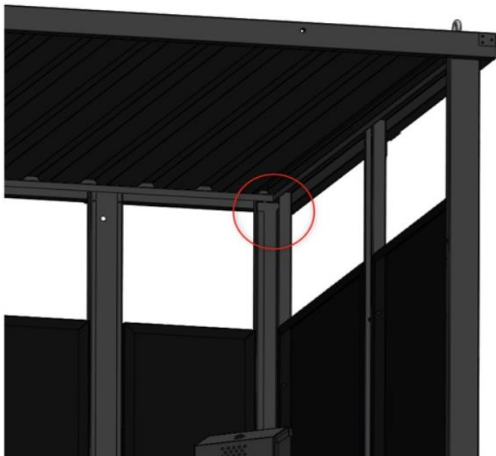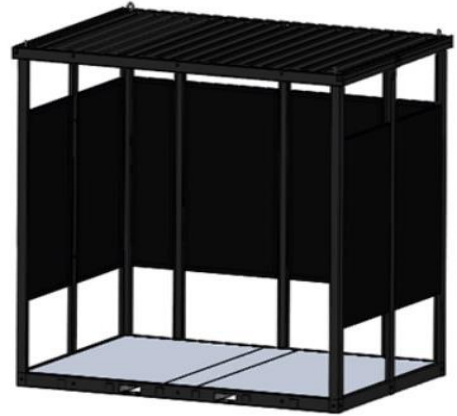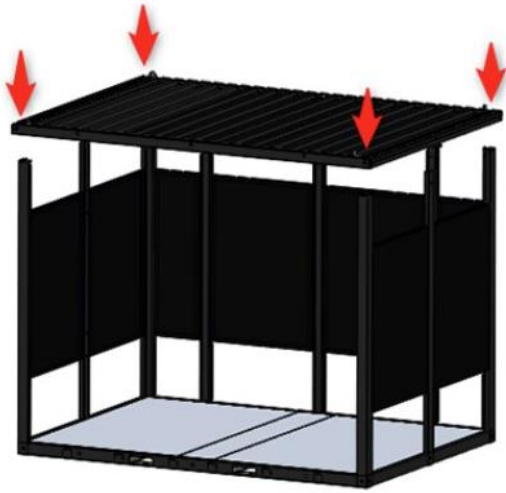


STEP 15:

ROOF AND MIDDLE PROFILE CONNECTION PART

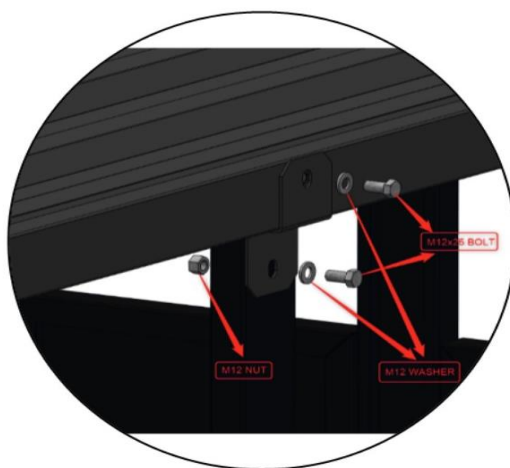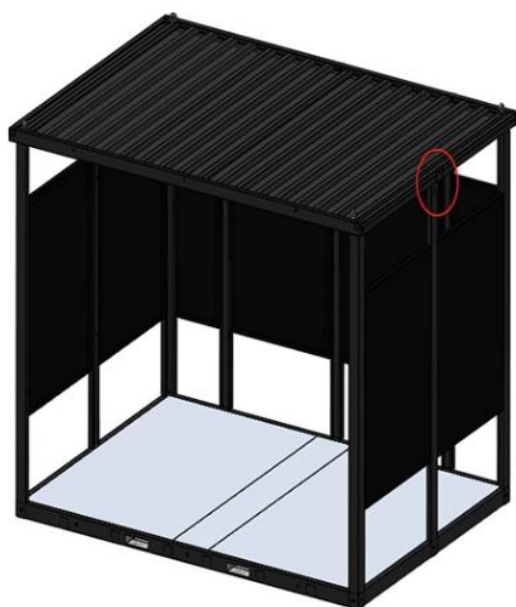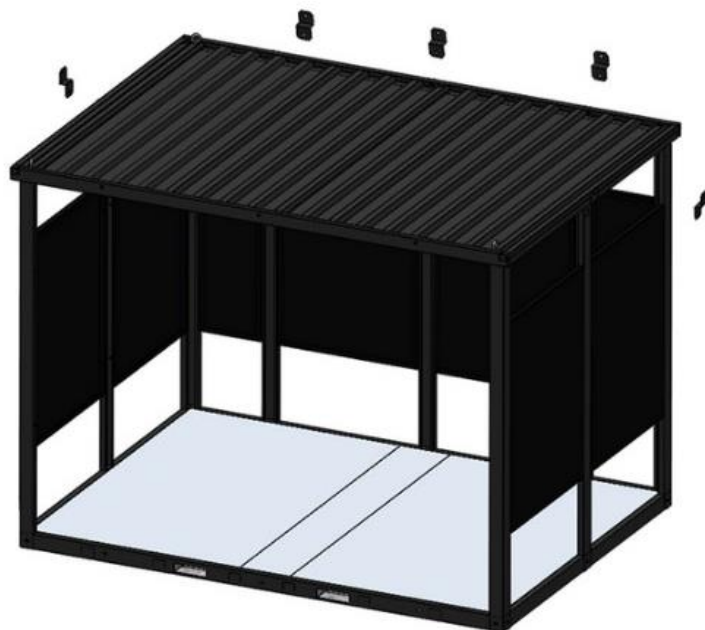

STEP 16:
PANELS CONNECTION

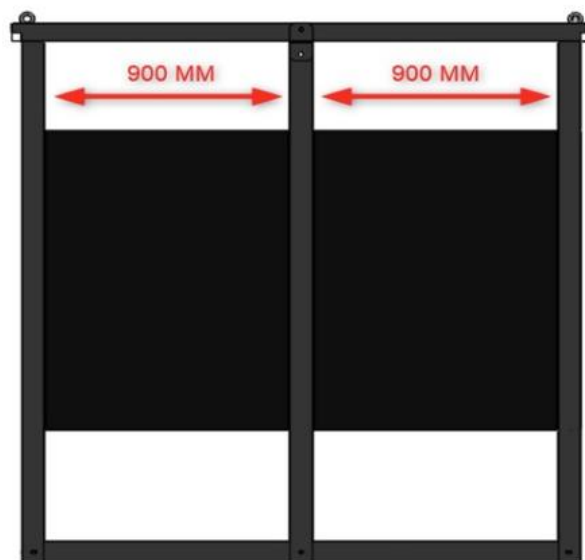

SHORT SIDE



LONG SIDE

STEP 17:
3M SHELTER



portablespace[®]
cabin & container hire | sales | conversions | modular

Portable Space Ltd,
Modular House, Bacton Business Park,
Stowmarket, Suffolk, IP14 4LE

T: +44(0) 01449 782123
info@portablespace.co.uk
www.portablespace.co.uk