
portablespace®

cabin & container hire | sales | conversions | modular

FLAT PACK MULTI-DOOR STORAGE CONTAINER


ASSEMBLY INSTRUCTIONS

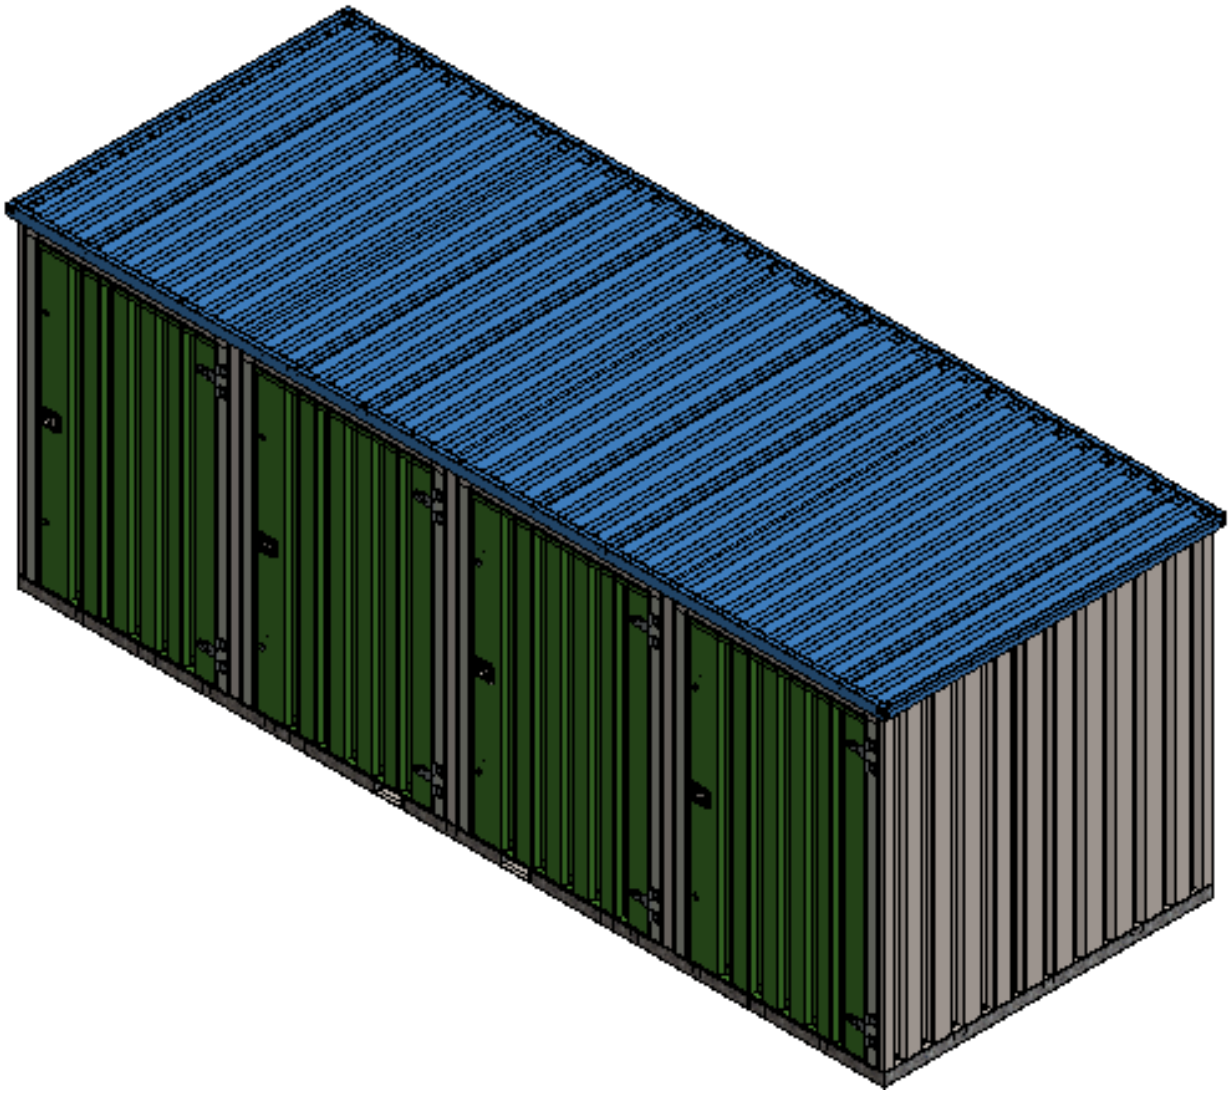


1. Place the chassis on a flat surface.




2. When attaching the front panel, place 4 bolts in the designated spots, but do not fully tighten them. Each bolt must be accompanied by a washer from the set provided.

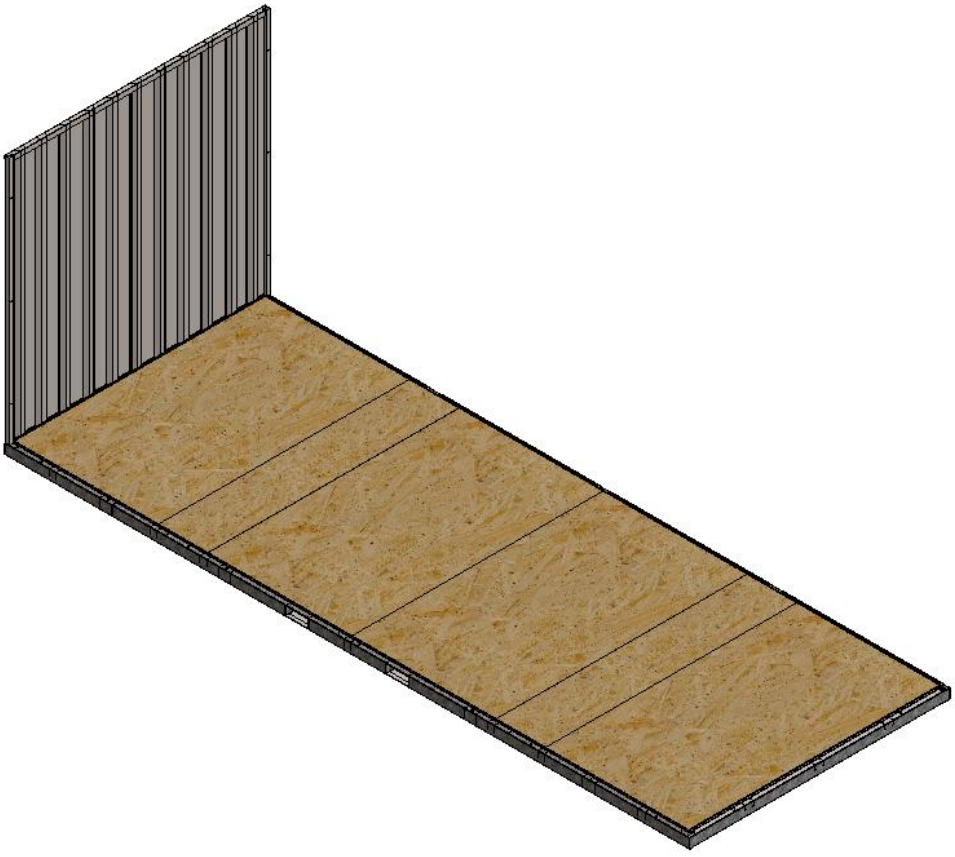


3. When attaching the front panel to the side panel, screw in 3 (M8) bolts. Additionally, screw in 2 (M8) bolts to the base. It is important that these bolts are not tightened fully. Each bolt must be accompanied by a washer from the provided set.

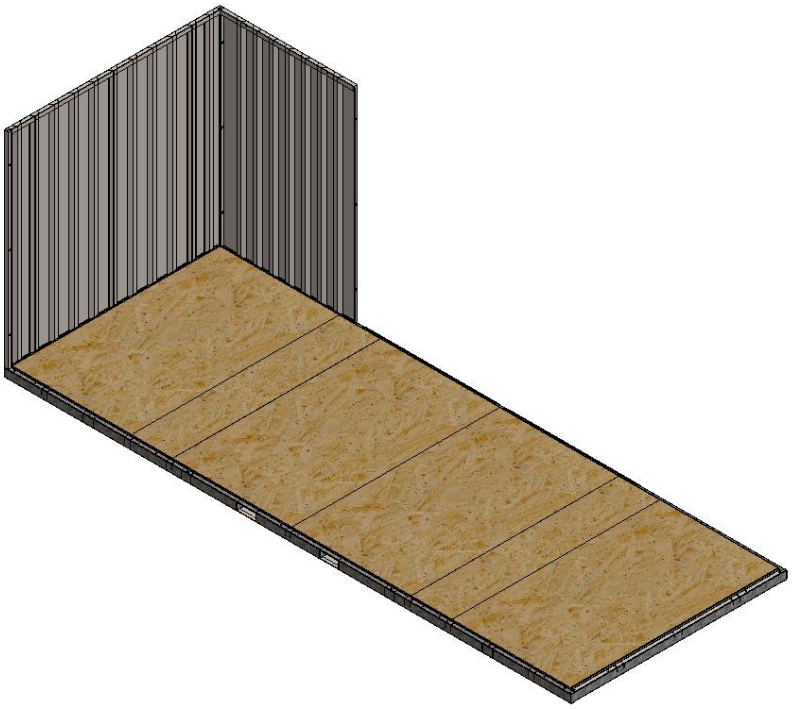


4. When attaching the side panel to the chassis, screw in 2 (M8) bolts. It is important that these bolts are not tightened fully. Each bolt must be accompanied by a washer from the provided set.

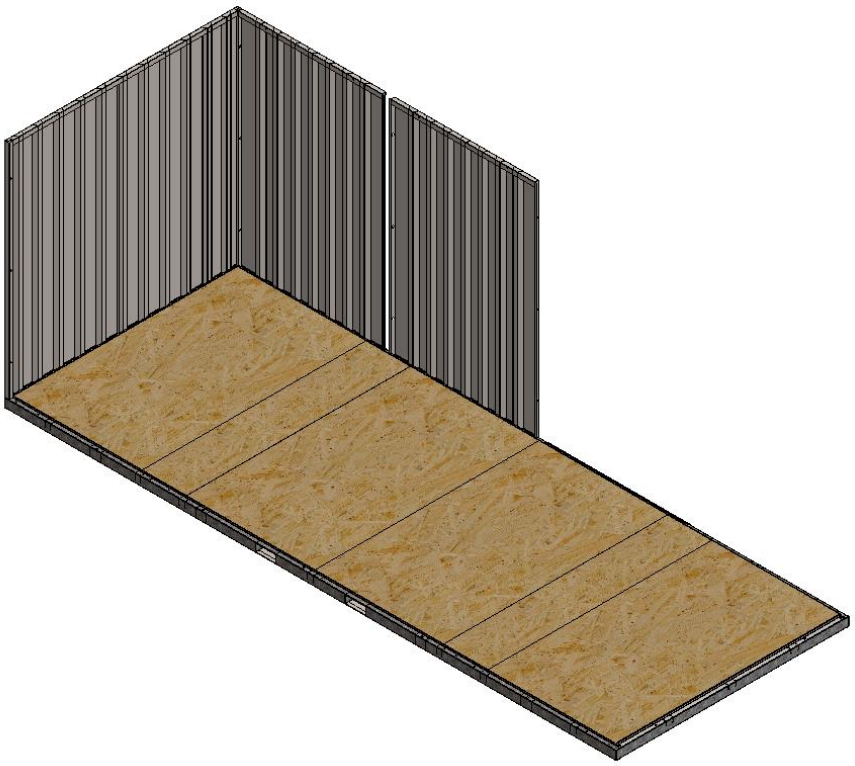



5. The outside connection profile must be installed from the outside.

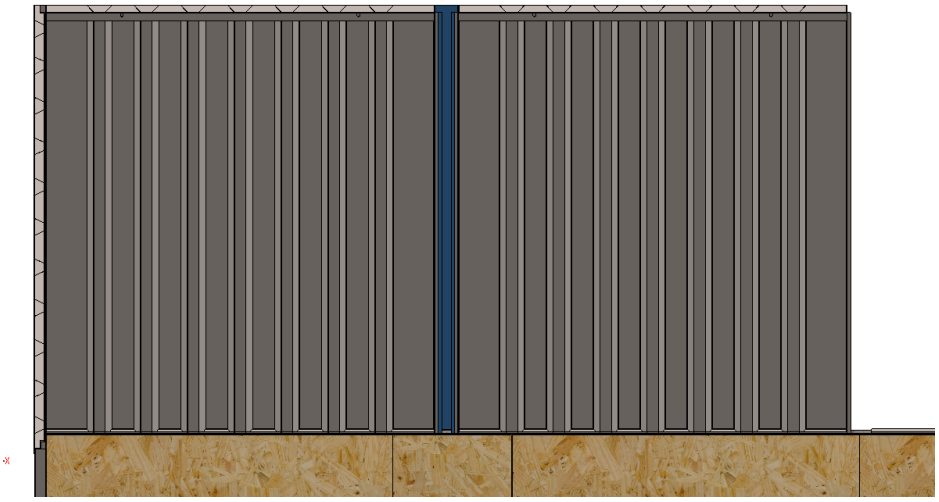

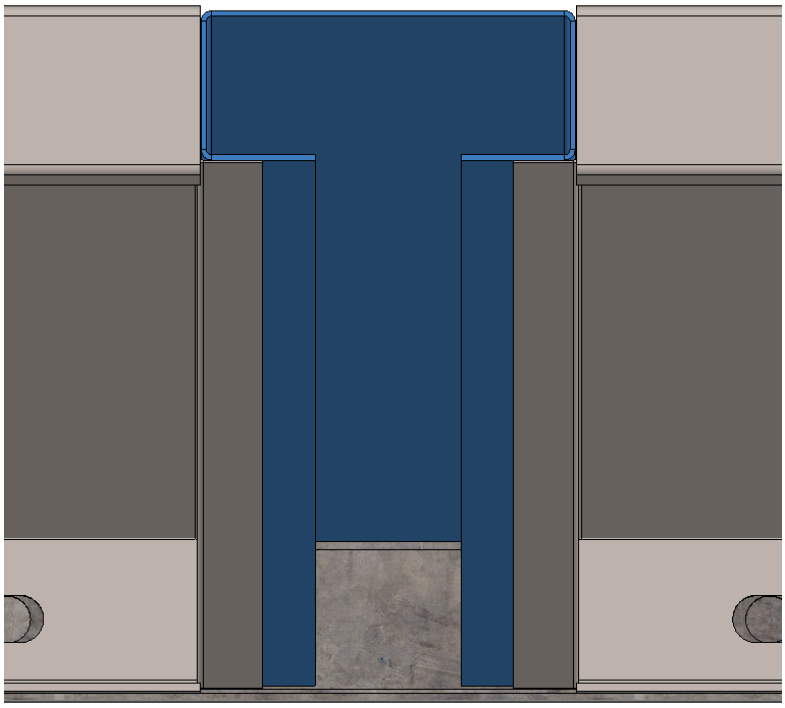


6. From the inner side, install the inside connection profile. After positioning it, insert 6 (M8) bolts, three on each side (left and right), and screw them in. It is important not to fully tighten these bolts. Each bolt must be accompanied by a washer from the provided set.

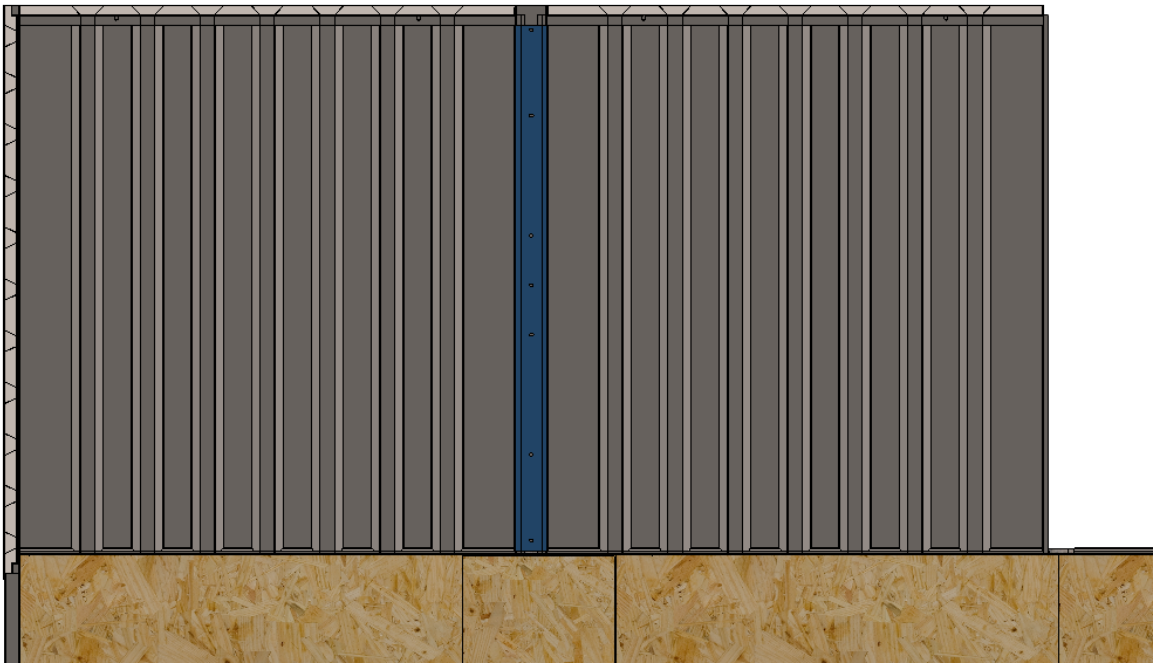


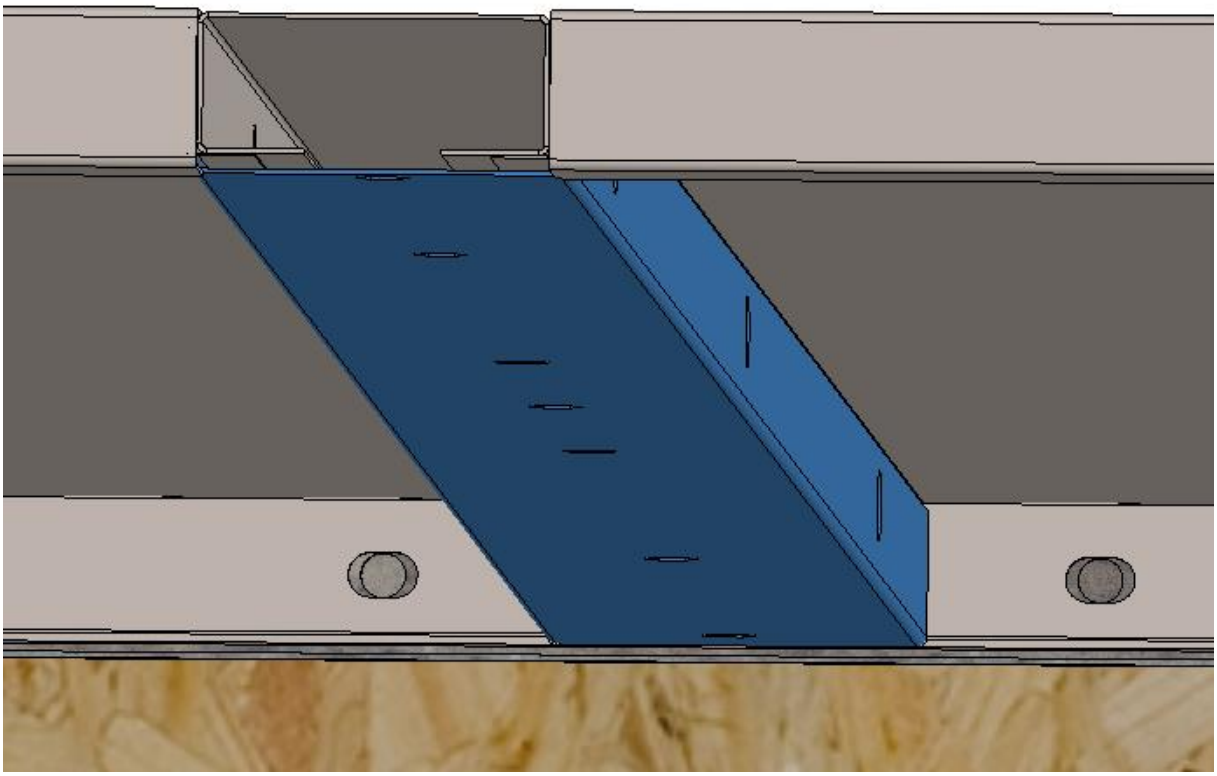


7. When attaching the door panel to the front panel, insert 2 (M8) bolts into the chassis and three (M8) bolts into the front panel. Screw them in, but do not fully tighten the bolts. Each bolt must be accompanied by a washer from the provided set.

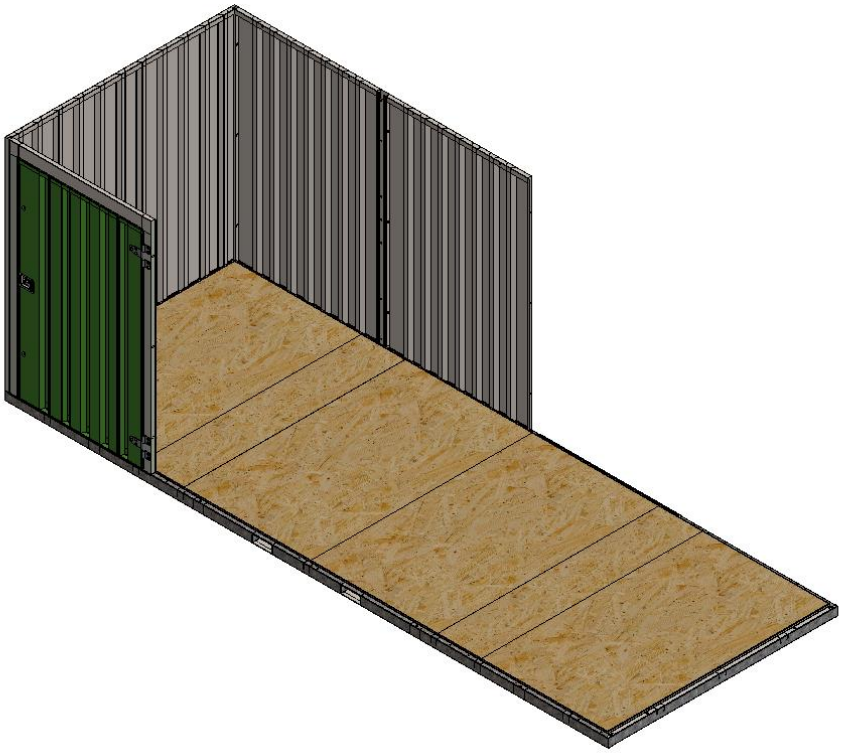

8. When attaching the door panel to the chassis, insert and screw in 2 (M8) bolts. It is important not to fully tighten the bolts. Each bolt must be accompanied by a washer from the provided set.

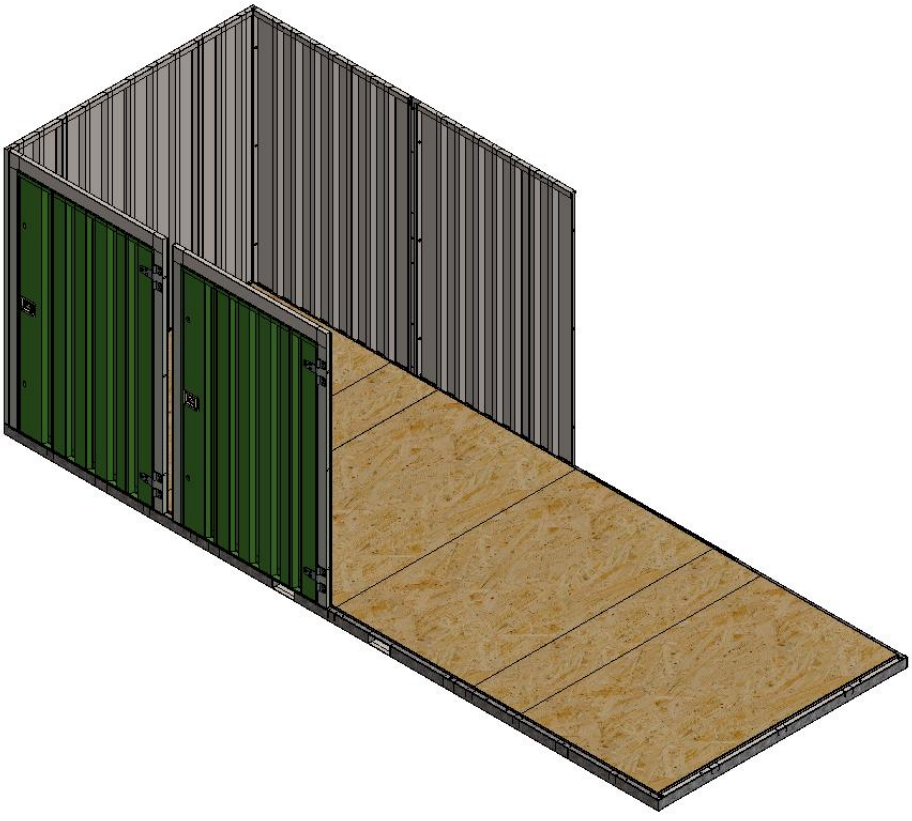



9. The outside connection profile must be placed from the outside between the two door panels.

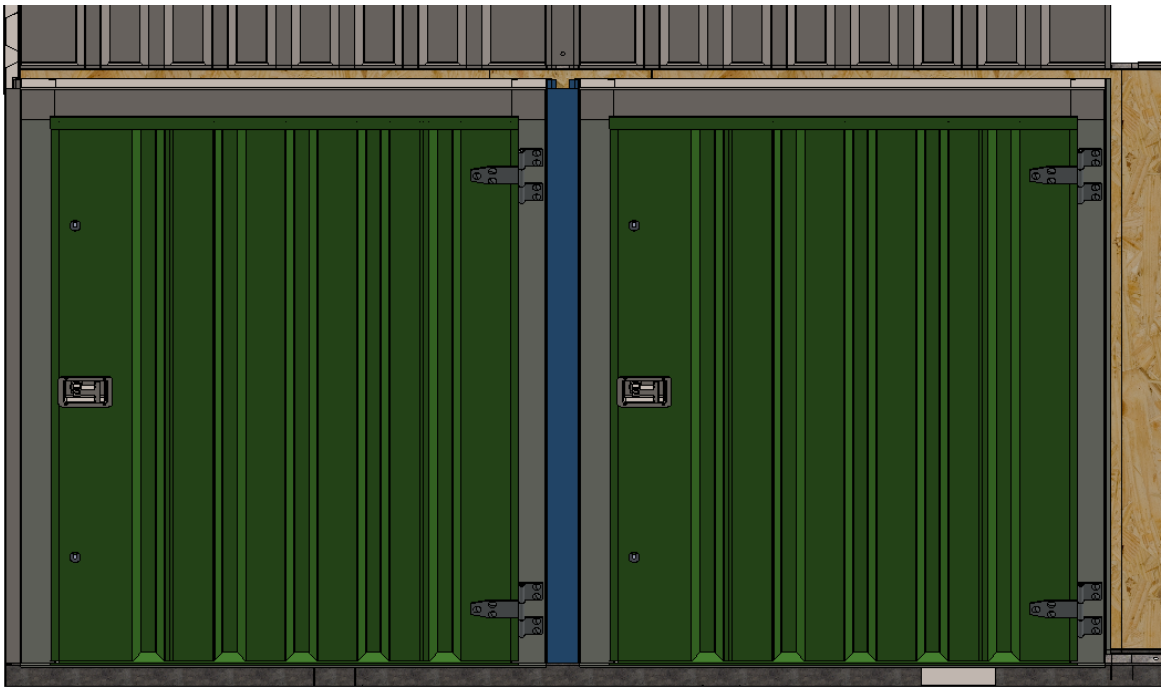




10. From the inner side, install the inside connection profile. Once in place, insert 6 (M8) bolts—three on each side (left and right). It is important not to fully tighten the bolts. Each bolt must be accompanied by a washer from the provided set.

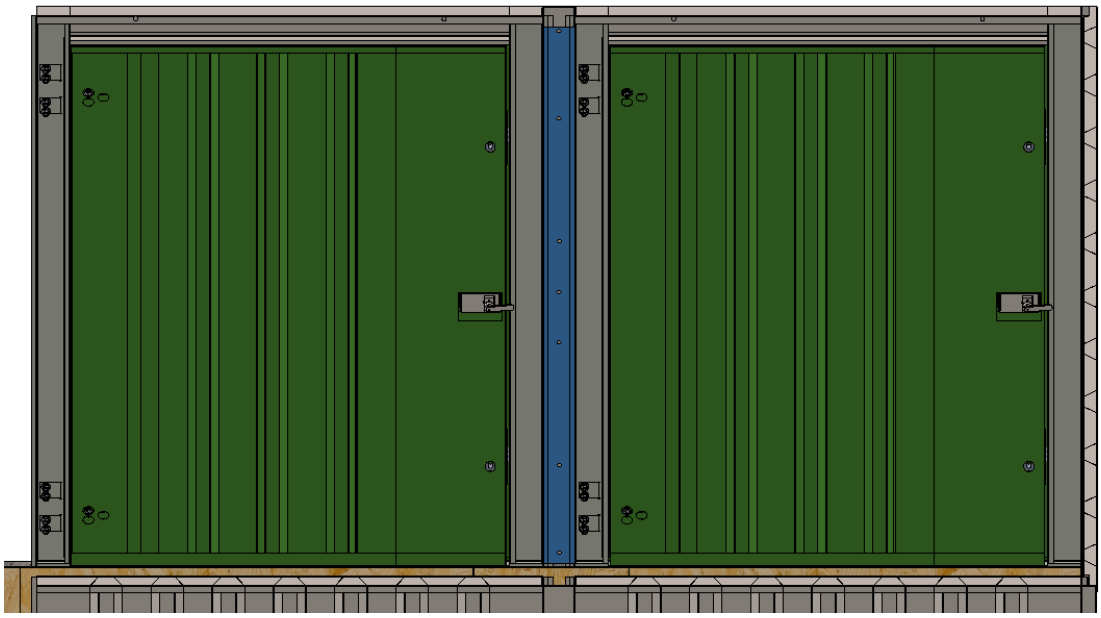

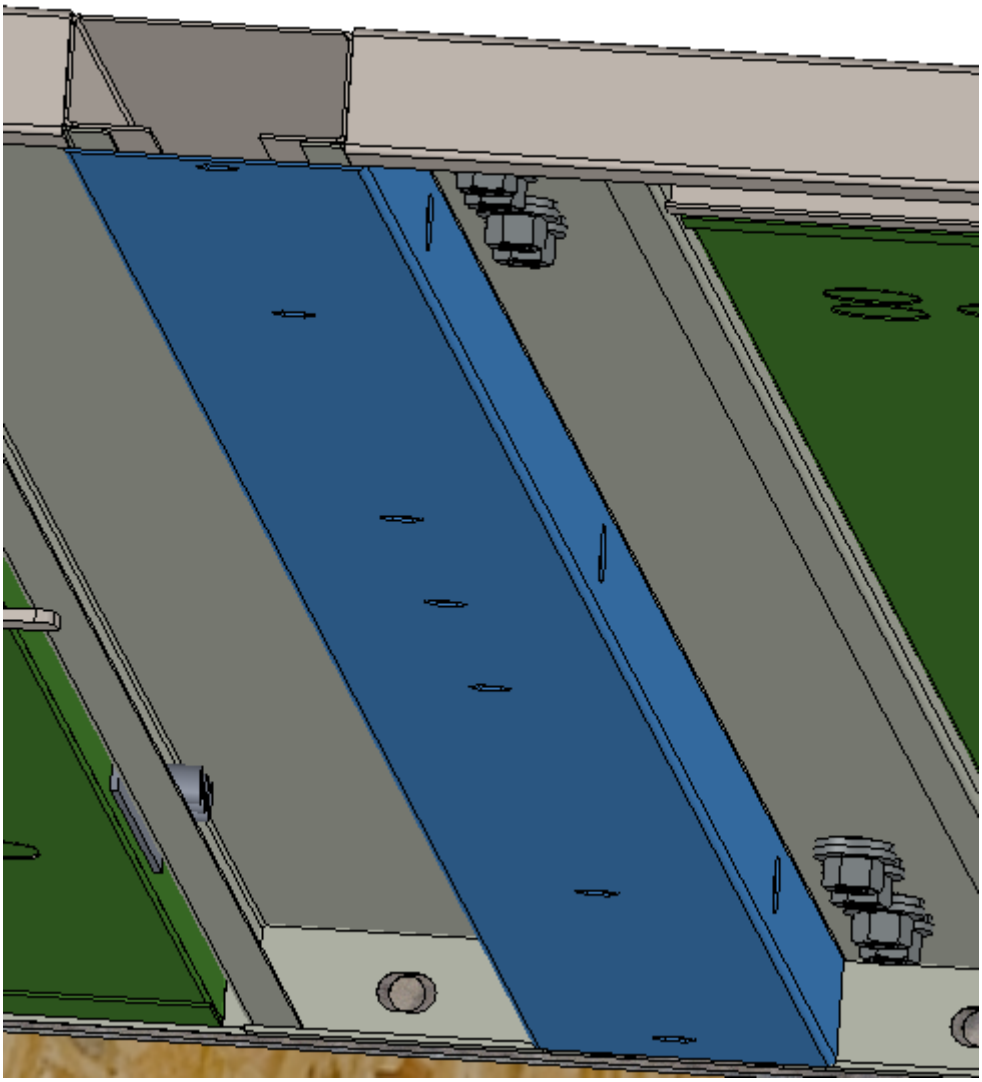


11. To install the dividing panel, place a total of 14 bolts: 7 from the door side and 7 from the other side. It is important not to fully tighten the bolts. Each bolt must be accompanied by a washer from the provided set.

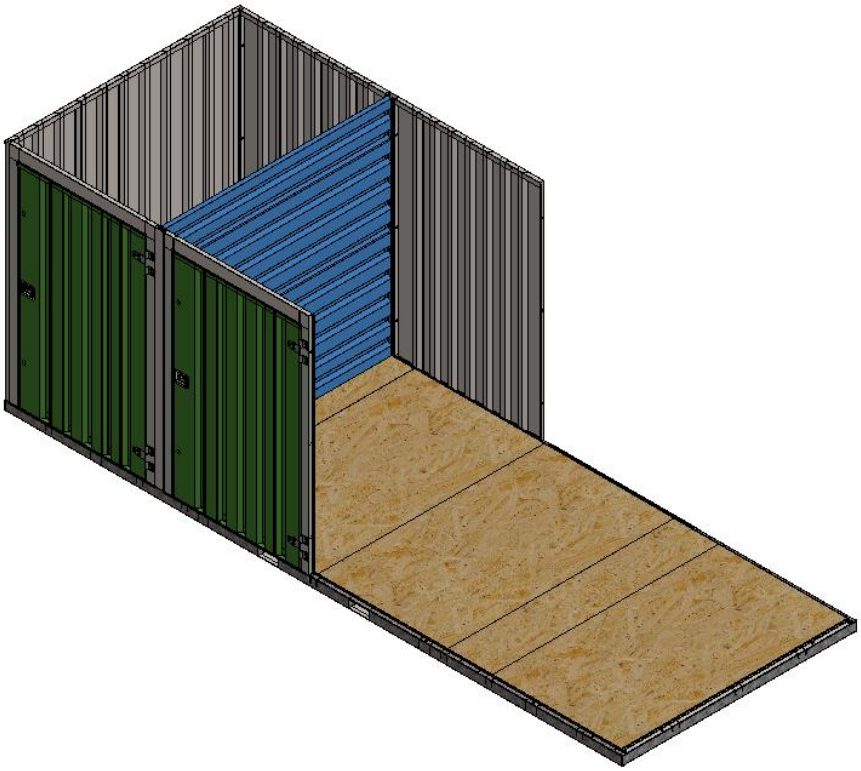


12.When attaching the side panel to the chassis, screw in 2 (M8) bolts. It is important not to fully tighten the bolts. Each bolt must be accompanied by a washer from the provided set.





13. Outside connection profile must be installed from the outside.

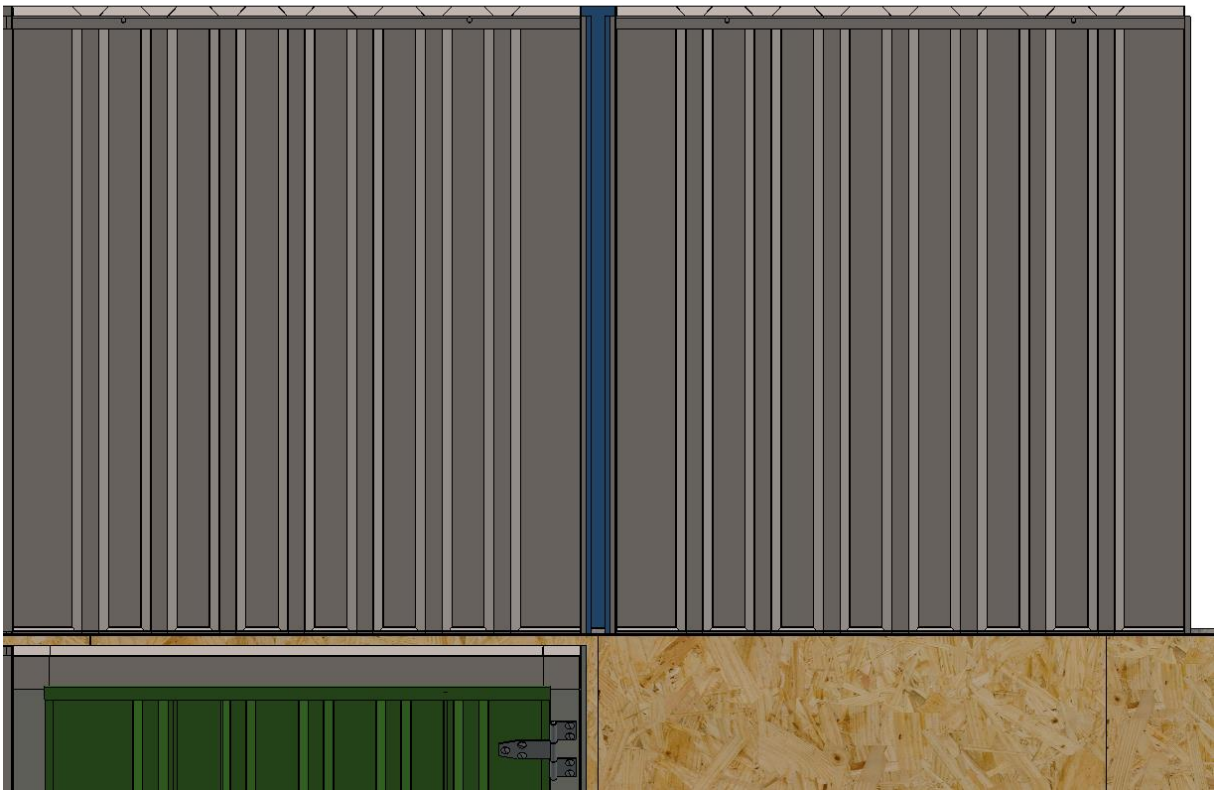

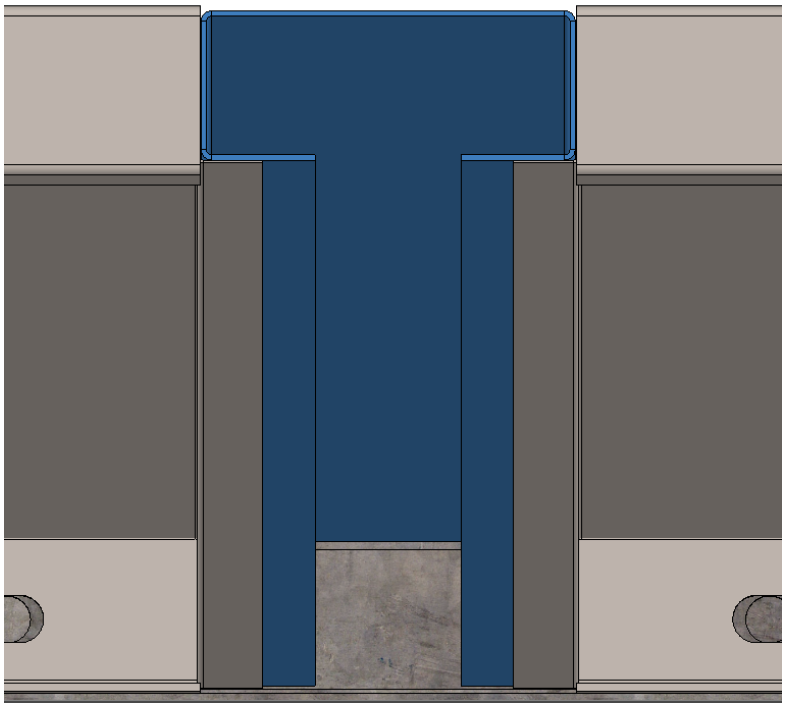

14. From the inner side, install the inside connection profile. Once in place, insert 6 (M8) bolts—three on each side (left and right)—and screw them in without fully tightening. Each bolt must be accompanied by a washer from the provided set.

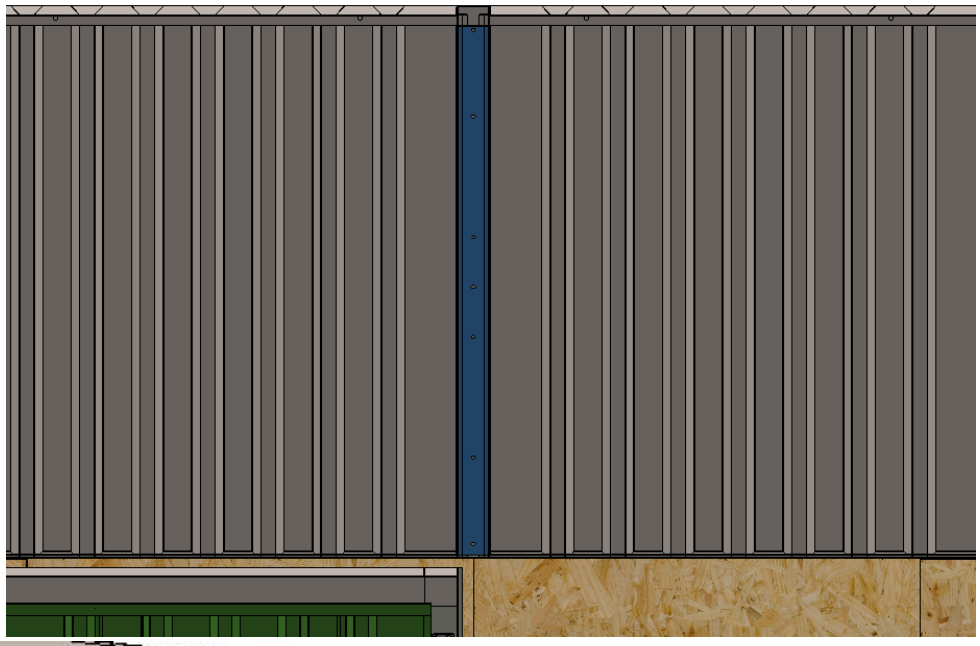


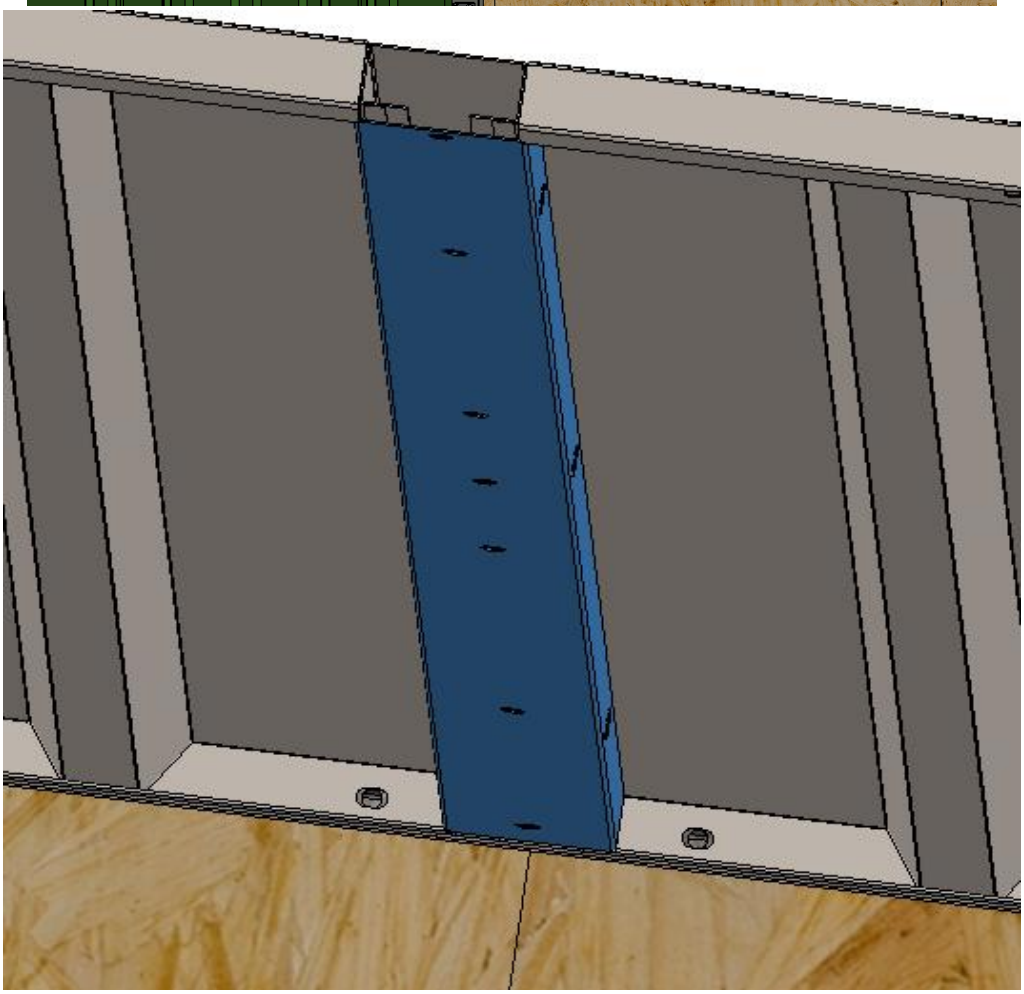

15. When attaching the door panel to the chassis, insert and screw in 2 (M8) bolts. It is important not to fully tighten the bolts. Each bolt must be accompanied by a washer from the provided set.





16. Outside connection profile must be installed from outside.

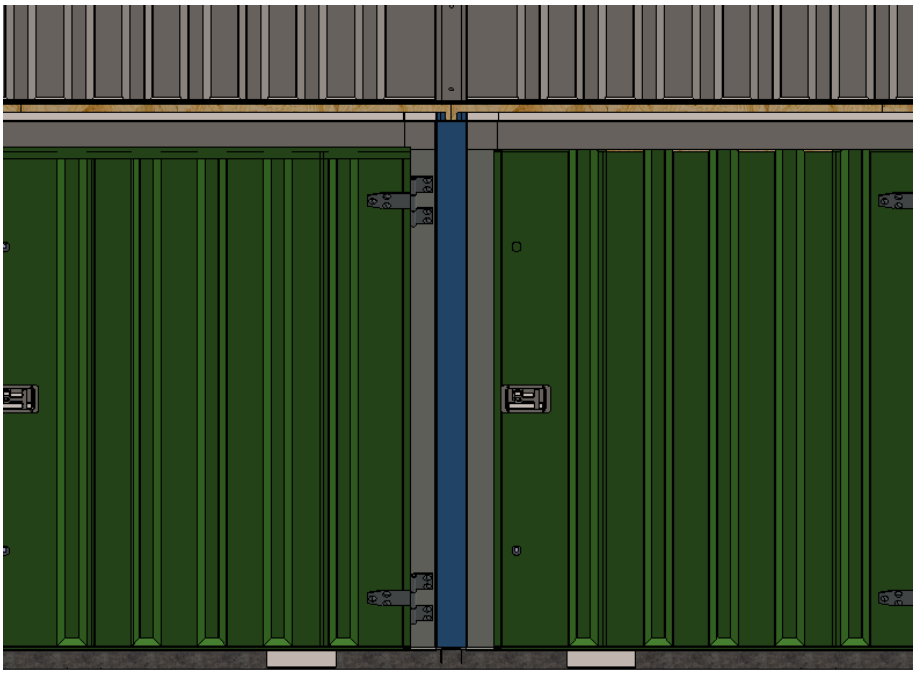




17. From the inner side, install the inside connection profile. Once in place, insert 6 (M8) bolts—three on each side (left and right)—and screw them in without fully tightening. Each bolt must be accompanied by a washer from the provided set.

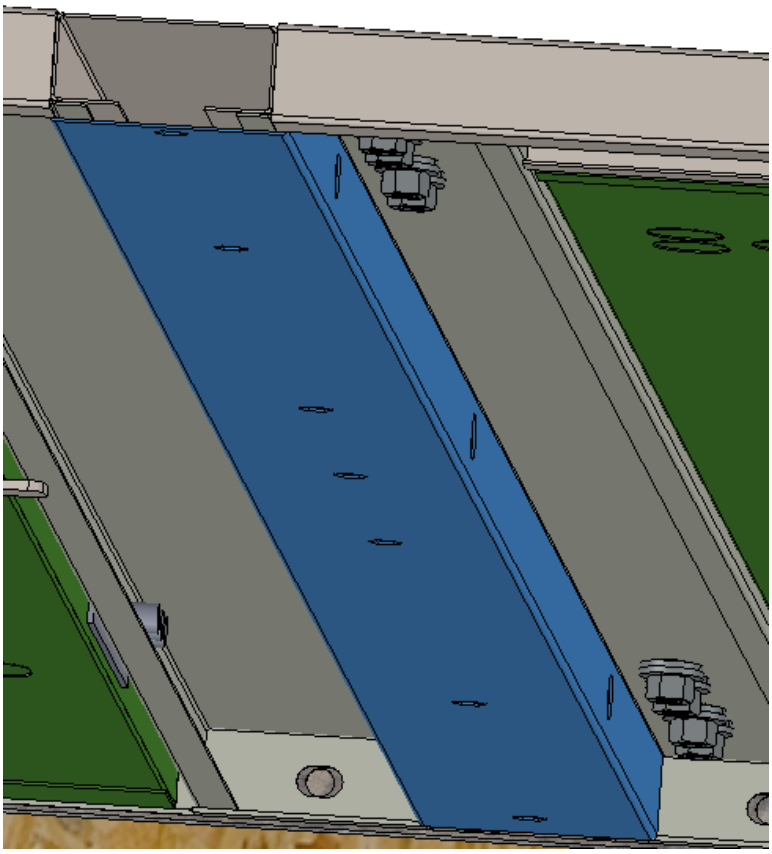


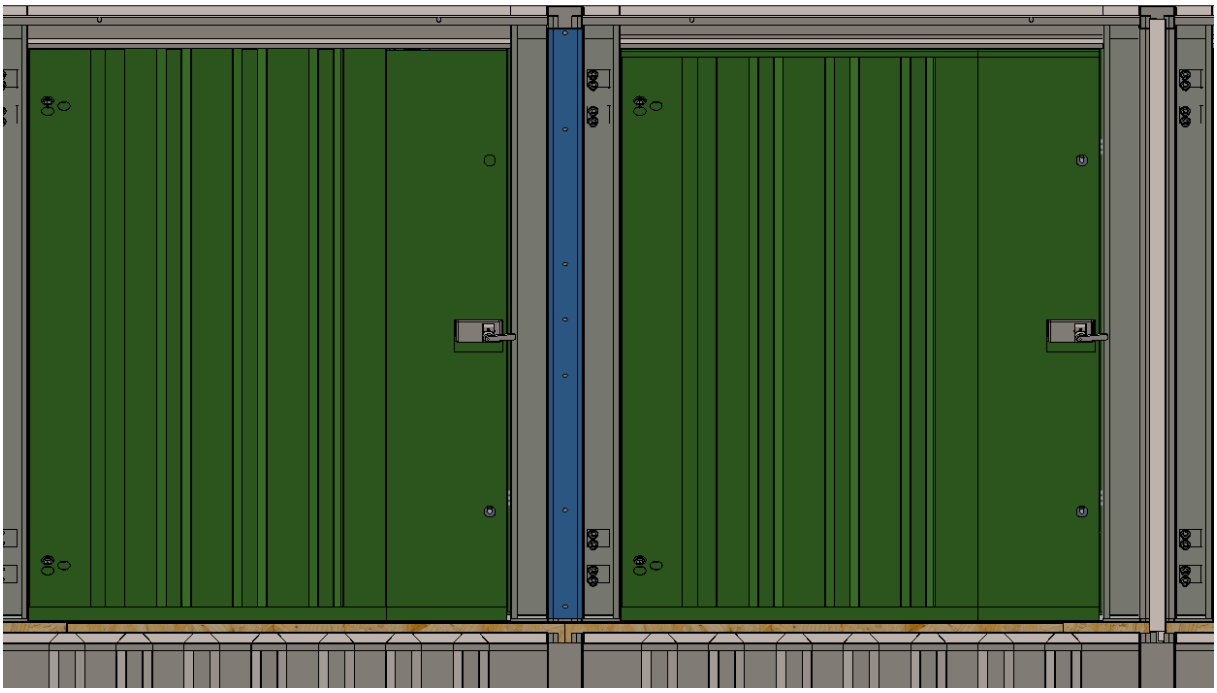


18. To install the dividing panel, place a total of 14 bolts: 7 from the door side and 7 from the other side. It is important not to fully tighten the bolts. Each bolt must be accompanied by a washer from the provided set.

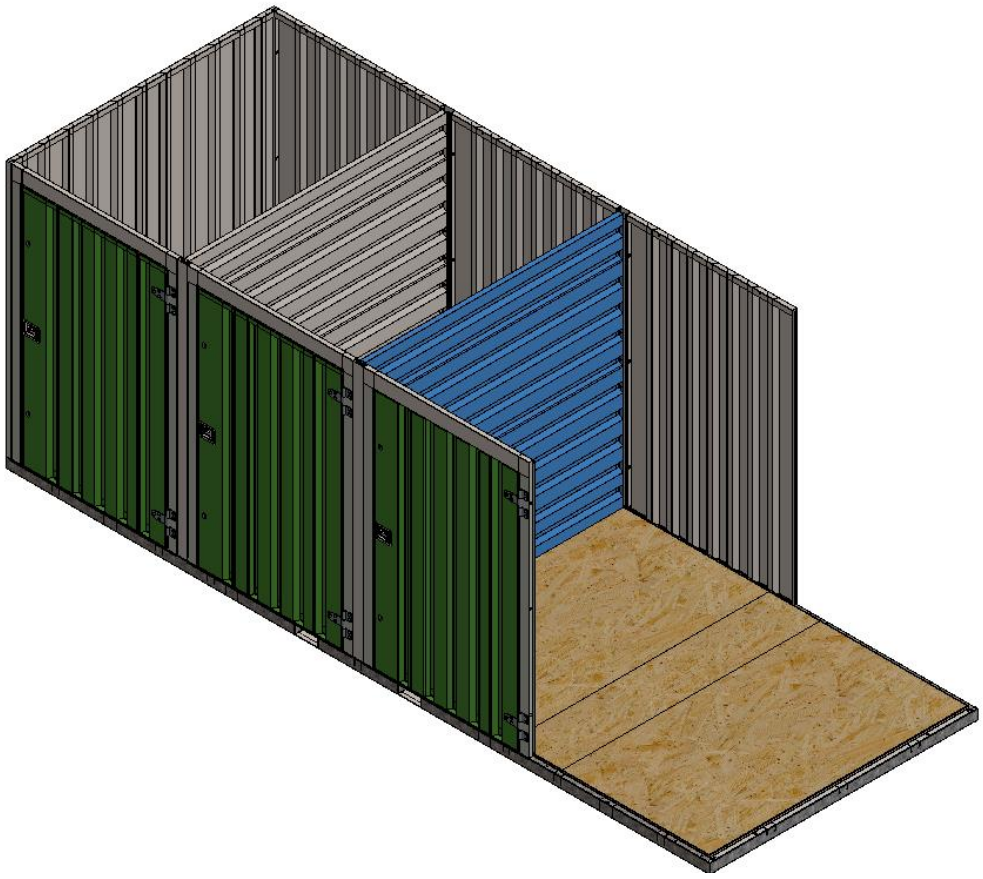


19. When attaching the side panel to the chassis, screw in 2 (M8) bolts. It is important not to fully tighten the bolts. Each bolt must be accompanied by a washer from the provided set.

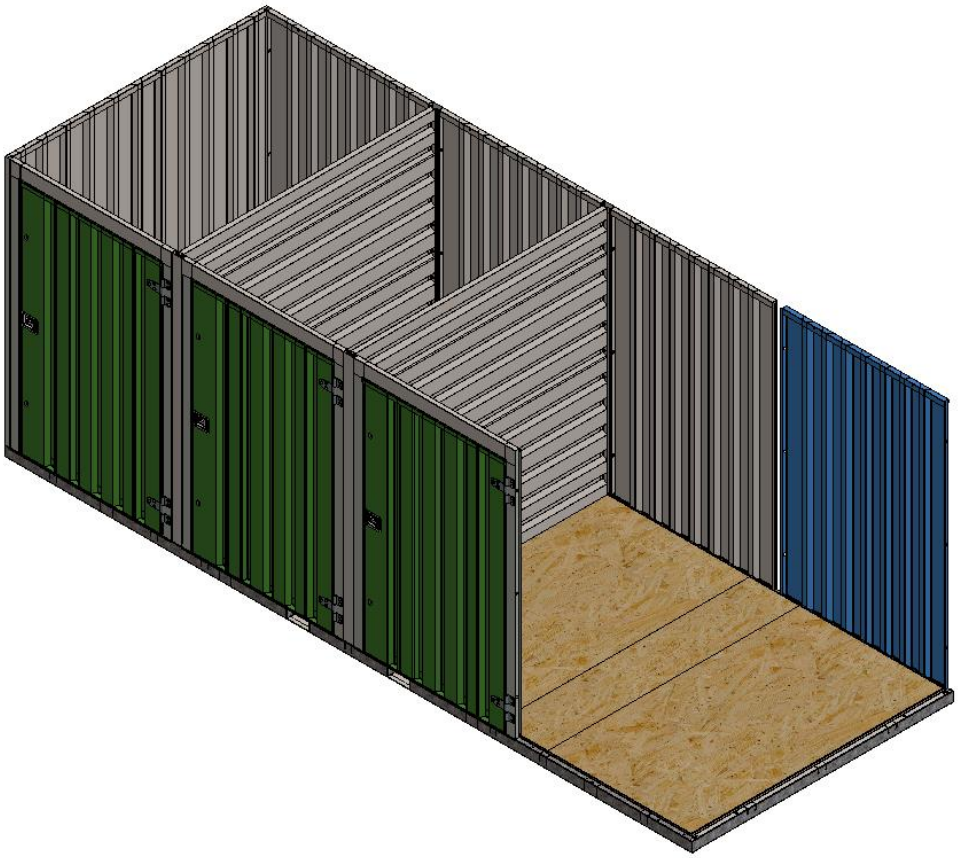



20. Outside connection profile must be installed from the outside.

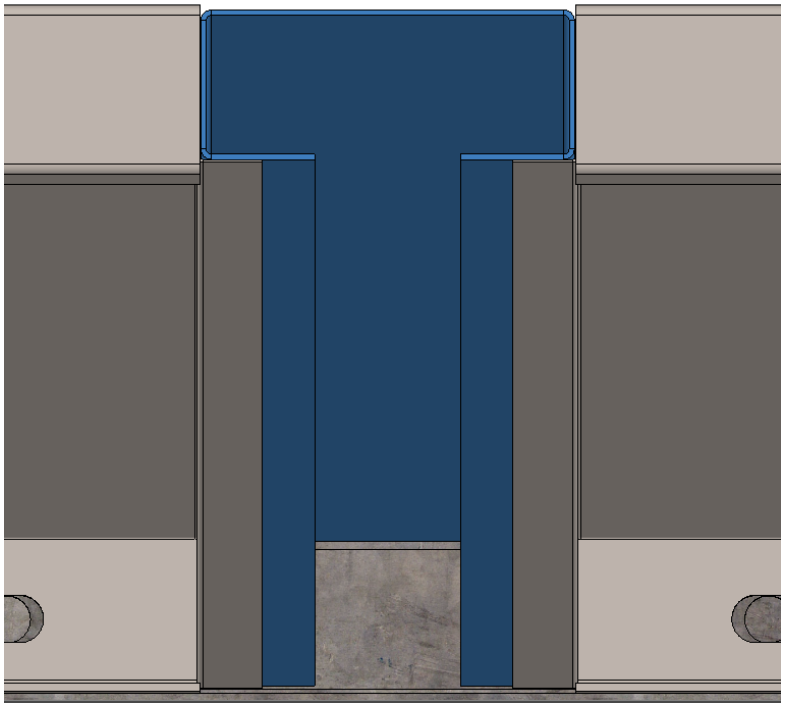

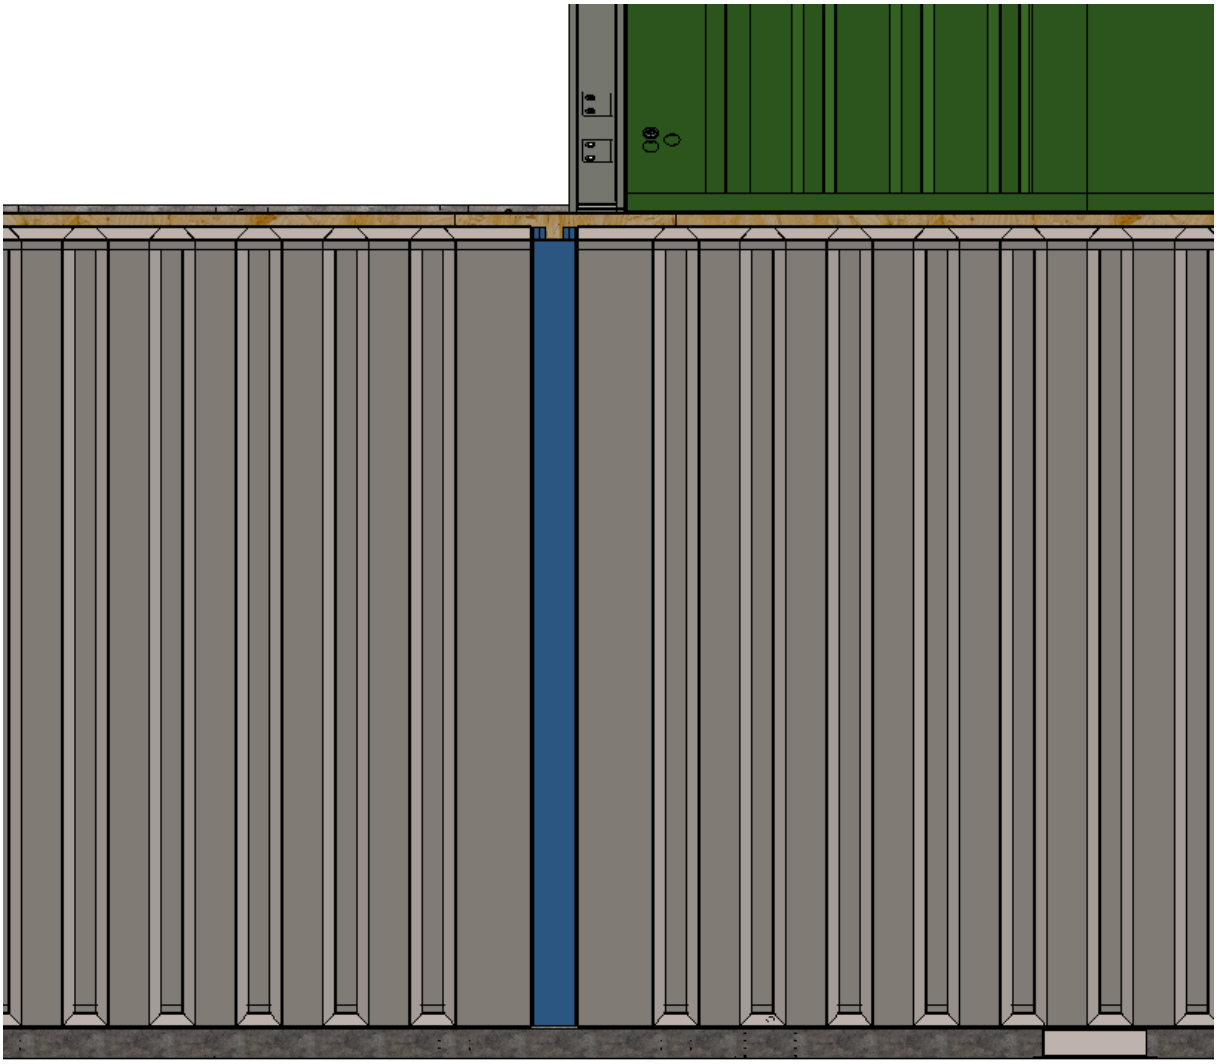


21. From the inner side, install the inside connection profile. Once in place, insert 6 (M8) bolts—three on each side (left and right)—and screw them in without fully tightening. Each bolt must be accompanied by a washer from the provided set.

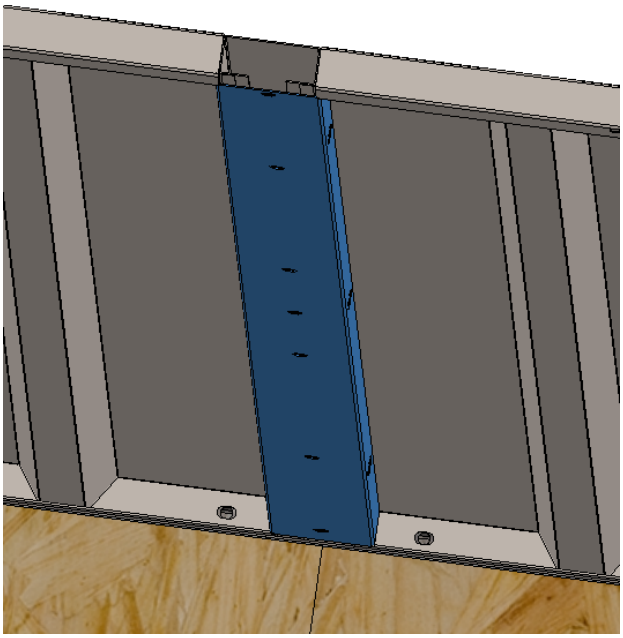


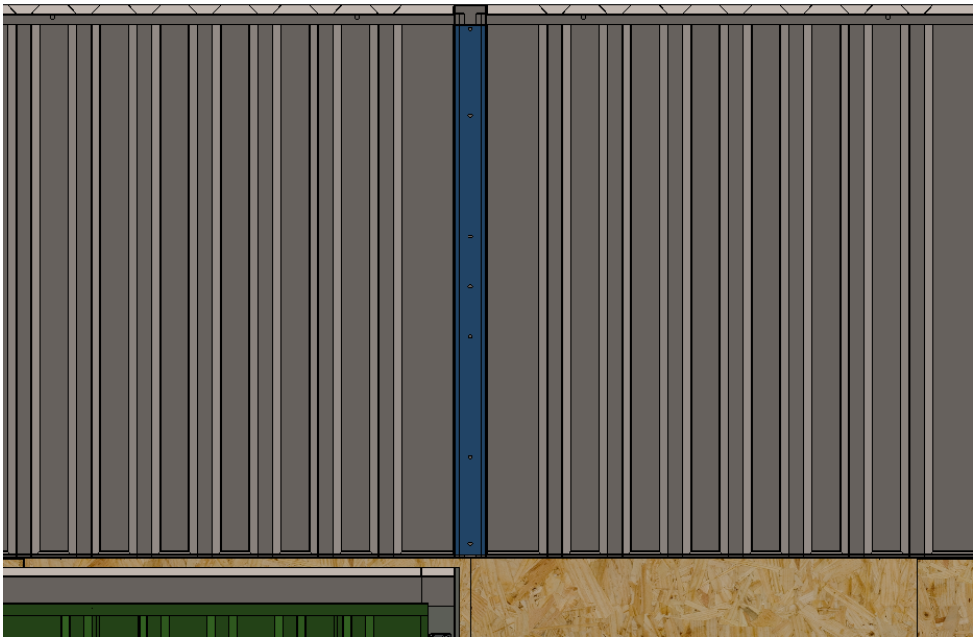

22. When attaching the door panel to the chassis, insert and screw in 2 (M8) bolts. It is important not to fully tighten the bolts. Each bolt must be accompanied by a washer from the provided set.

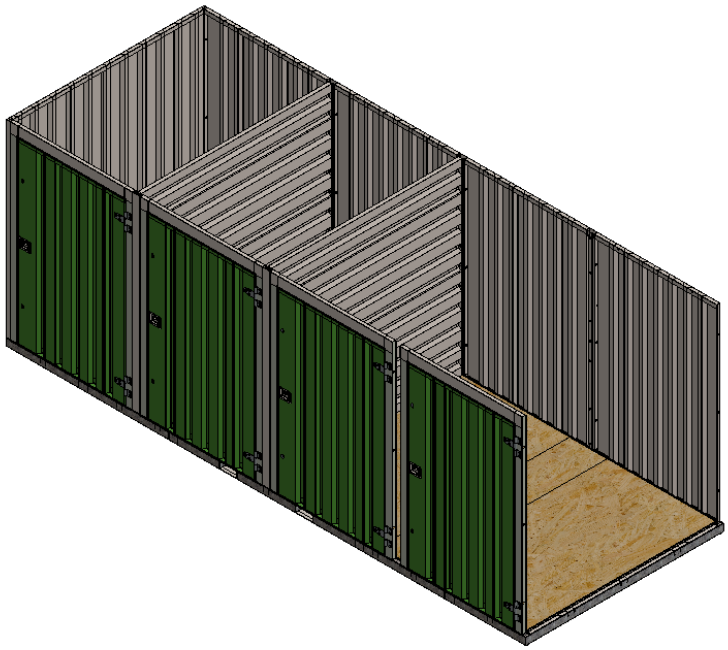



23. Outside connection profile must be installed from the outside.

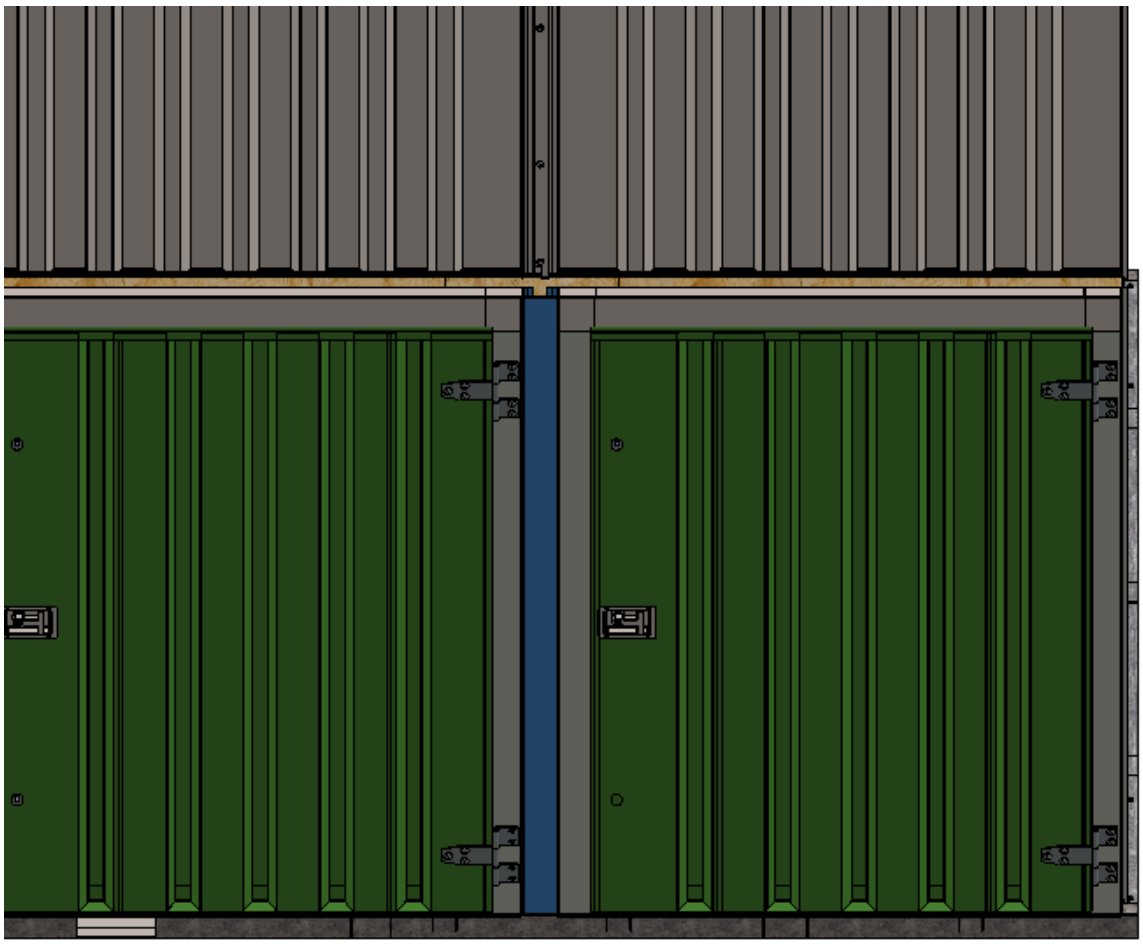




24. From the inner side, install the inside connection profile. Once in place, insert 6 (M8) bolts—three on each side (left and right)—and screw them in without fully tightening. Each bolt must be accompanied by a washer from the provided set.

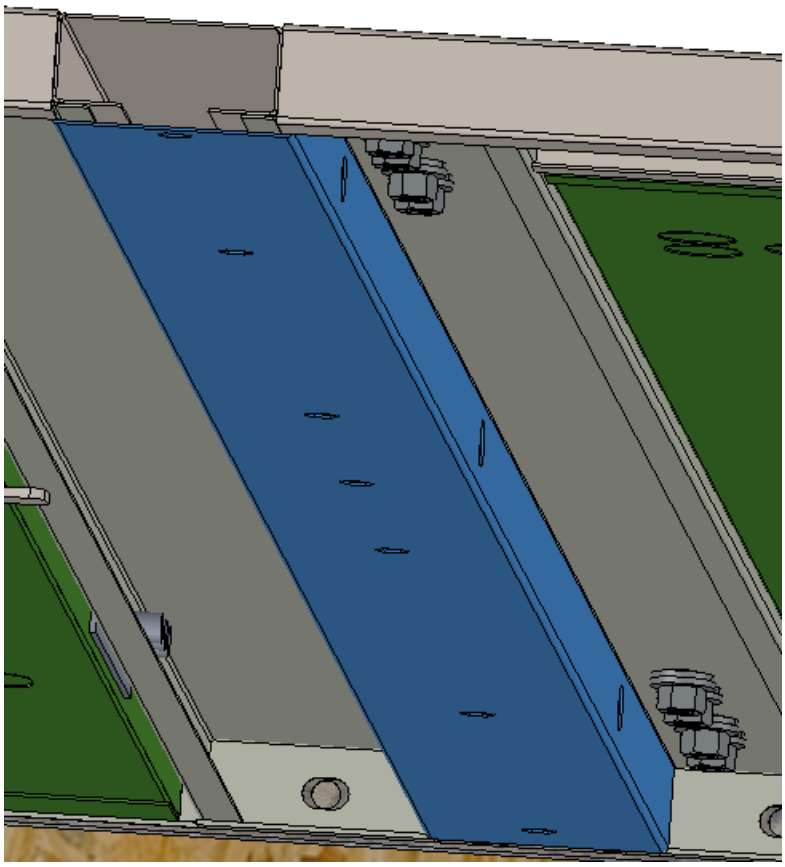

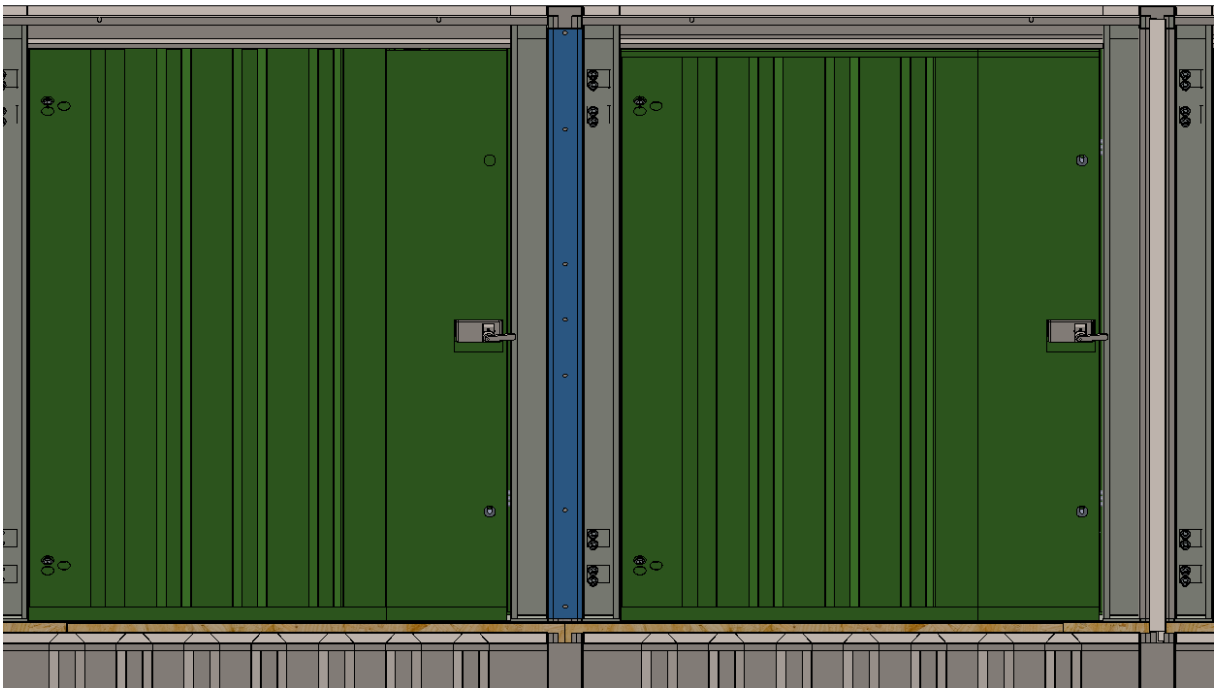


25. To install the dividing panel, place a total of 14 bolts: 7 from the door side and 7 from the other side. It is important not to fully tighten the bolts. Each bolt must be accompanied by a washer from the provided set.

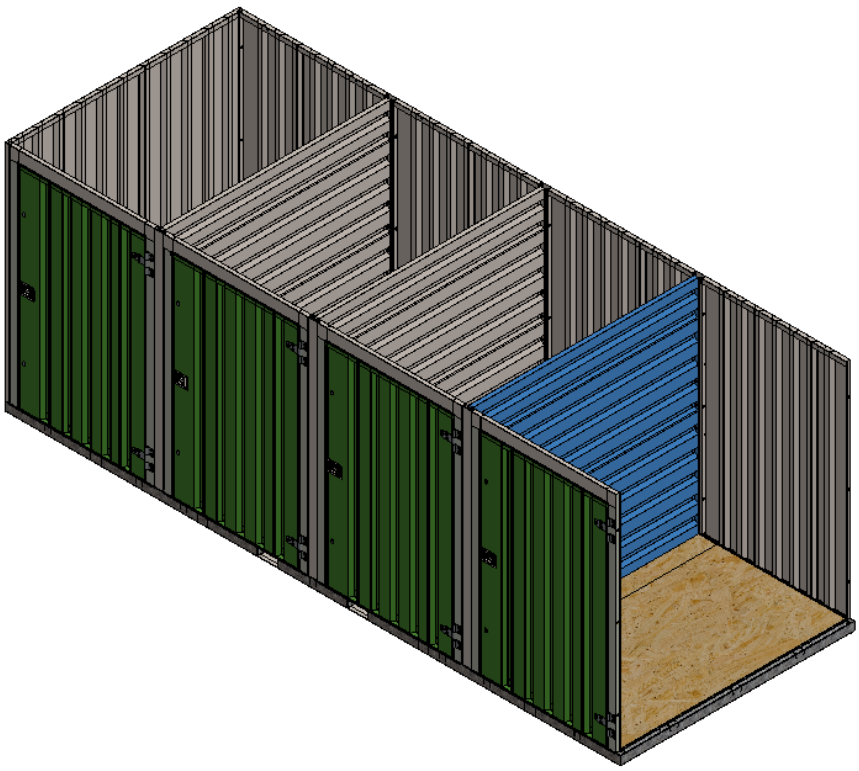

26. When attaching the front to the chassis, screw in 4 (M8) bolts to the door panel and 3 (M8) bolts to each side panel. It is important not to fully tighten the screws. Each bolt must be accompanied by a washer from the provided set.



27. After placing the rooftop in its position, screw in 2 (M8) bolt sets for each side panel to connect them to the rooftop. Similarly, screw in 2 (M8) bolt sets for each door panel to connect them to the rooftop. The total quantity of bolt sets used must be 16. Once the rooftop assembly is complete, securely tighten all previously unscrewed bolts for the whole container construction.

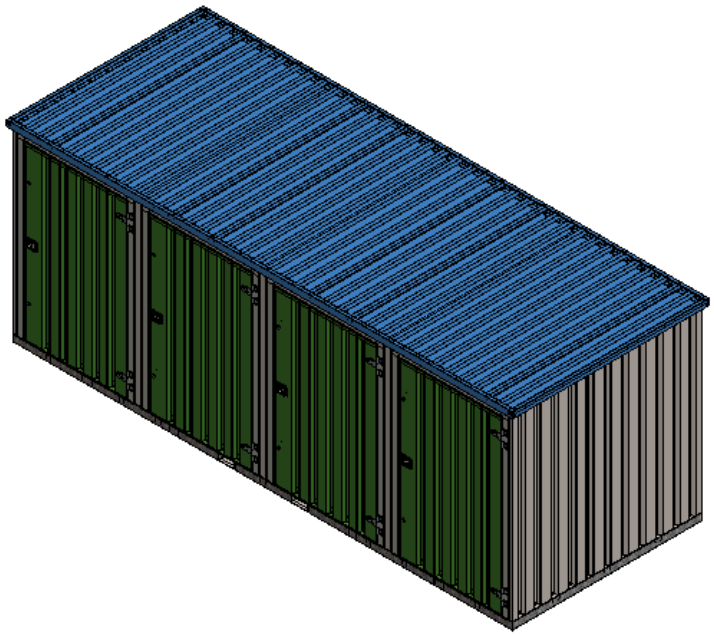

portablespace®

cabin & container hire | sales | conversions | modular

Portable Space Ltd,
Modular House, Bacton Business Park ,
Stowmarket, Suffolk, IP14 4LE

T:+44(0) 01449 782123
info@portablespace.co.uk
www.portablespace.co.uk